



Wireless H.264 Mega-Pixel PT IP Camera

ICA-HM220W

User's Manual

Version: 1.00

Copyright

Copyright © 2008 by PLANET Technology Corp. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of PLANET.

PLANET makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Any software described in this manual is sold or licensed "as is". Should the programs prove defective following their purchase, the buyer (and not PLANET, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software. Further, PLANET reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation to notify any person of such revision or changes.

All brand and product names mentioned in this manual are trademarks and/or registered trademarks of their respective holders.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio technician for help.

FCC Caution

To assure continued compliance. (example-use only shielded interface cables when connecting to computer or peripheral devices). Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the Following two conditions: (1) This device may not cause harmful interference, and (2) this Device must accept any interference received, including interference that may cause undesired operation.

Federal Communication Commission (FCC) Radiation Exposure Statement

This equipment complies with FCC radiation exposure set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 20 cm (8 inches) during normal operation.

Safety

This equipment is designed with the utmost care for the safety of those who install and use it. However, special attention must be paid to the dangers of electric shock and static electricity when working with electrical equipment. All guidelines of this and of the computer manufacture must therefore be allowed at all times to ensure the safe use of the equipment.

CE Mark Warning

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

WEEE Regulation



To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.

Revision

User's Manual for PLANET Wireless H.264 Mega-Pixel PT IP Camera
Model: ICA-HM220W
Rev: 1.0 (March. 2010)
Part No. EM-ICAHM220W

Table of Content

1. Introduction.....	5
1.1 Overview.....	5
1.2 Features.....	5
1.3 Package Contents.....	6
2. Basic Setup.....	7
2.1 System Requirements.....	7
2.2 Physical Description.....	8
2.2.1. Front Panel.....	8
2.2.2. Rear Panel.....	9
2.2.3. Bottom Panel.....	10
2.3 Hardware Installation.....	11
2.3.1. Camera Physical Installation.....	11
2.3.2. Locate the IP Address of this IP Camera.....	13
2.4 Initial Utility Installation.....	17
2.5 Camera Admin locate IP Camera.....	22
2.6 Using UPnP of Windows XP or Vista.....	24
2.6.1. Windows XP.....	24
2.6.2. Windows Vista.....	29
2.7 Setup ActiveX to use the IP Camera.....	30
2.7.1. Internet Explorer 6 for Windows XP.....	30
2.7.2. Internet Explorer 7 for Windows XP.....	31
2.7.3. Internet Explorer 7 for Windows Vista.....	32
3. Web-based Management Interface.....	33
3.1 Introduction.....	33
3.2 Connecting to IP Camera.....	33
3.3 Camera Settings.....	35
3.4 Video Settings.....	38
3.4.1. MJPEG.....	39
3.4.2. MPEG4.....	40
3.4.3. H.264.....	41
3.4.4. OSD.....	42
3.4.5. Night Vision.....	43
3.5 Pan and Tilt Settings.....	44
3.5.1. Preset Points.....	44
3.5.2. Grand Tour.....	45
3.6 Network Settings.....	47
3.6.1. LAN.....	47
3.6.2. WLAN.....	49
3.6.3. Dynamic DNS.....	52
3.6.4. UPnP.....	53
3.6.5. LoginFree.....	54
3.6.6. RTSP.....	55
3.7 Motion Detection Setting.....	56
3.7.1. Motion Detection.....	56
3.7.2. Motion Region.....	59

3.7.3. Email.....	61
3.7.4. FTP Configuration	63
3.7.5. SD Card Configuration	64
3.8 System Info	65
3.8.1. Camera Information	65
3.8.2. Date / Time Setting	66
3.8.3. Utilities.....	67
3.8.4. Status	68
3.9 Account Settings	69
3.10 SDHC	71
3.10.1. Status	71
3.10.2. Space Alarm	72
3.10.3. File Management	73
Appendix A: Reset Factory Default Settings	74
Appendix B: iPhone Viewer Mobile Access	75
Appendix C: PING IP Address	78
Appendix D: DDNS Application	79
Appendix E: Troubleshooting & Frequently Asked Questions	83
Appendix F: Product Specification	86

1. Introduction

Thank you for purchasing the PLANET Wireless H.264 Mega-Pixel PT IP Camera. It is versatile and high image solution of surveillance application IP Camera is also a stand-alone camera system with a built-in processor and web server that provides highest quality video and system performance.

1.1 Overview

This user's manual explains how to operate the Wireless H.264 Mega-Pixel PT IP Camera from a computer, unless model name specified terms "IP camera" will be used for the two models. The user's manual is written to be read on the computer display. However, users might consider printing it out to access easily and read it before you operate the Network Camera. This guide shows how to quick set up the three cameras.

1.2 Features

- 1.3 Mega-Pixel sensor built-in
- H.264 / MPEG-4 / M-JPEG multi video compression
- 9 IR LED and light sensor could operate in dark environment
- Offers pan range of 350-degrees and tilt range of 120-degrees to control over network
- 2-Way audio with built-in microphone and additional external speaker
- Plug-N-Watch is able to simplify system integration in existing network environment
- Network administrators can configure and manage via Windows-based utility or web interface
- DDNS, PPPoE and FTP uploading supports more alternatives in surveillance network
- Motion detection feature can monitor any suspicious movement in specific area
- Anti-flicker function, eliminates flash caused by fluorescent lights, 50 / 60Hz selectable
- Sends captured picture and video by Email or FTP when motion is detected
- Built-in real-time clock, date and time information will be recorded with every captured picture / video clip
- Supports multiple login simultaneously up to 16 users.
- WEP / WPA / WPA2 Wireless data encryption (wireless model)
- Supports WPS function (wireless model)
- Supports SD card to save local recording video and image
- Build-in iPhone Viewer for iPhone mobile remote applications
- Cam Viewer Plus - Central management software supported

1.3 Package Contents

IP Camera x 1

Power Adapter x 1

RJ-45 cable x 1

Quick Installation Guide x 1

User's manual CD x 1

Ceiling Mount Accessories x 1

Antenna x 2

-
- NOTE:**
1. *If any of the above items are missing, please contact your dealer immediately.*
 2. *Using the power supply that is not the one included in Internet Camera packet will cause damage and void the warranty for this product.*
-

2. Basic Setup

This chapter provides details of installing and configuring the PT IP Camera

2.1 System Requirements


The Internet Camera can be monitoring on all of Windows operating system that suggest with system requirement below in order to got better video performance.

Network Interface	10/100MBase-TX Ethernet
Monitoring System	Recommended for Internet Explorer 6.0 or later
System Hardware	<ul style="list-style-type: none">· CPU: Pentium 4, 3.0GHz or above· Memory Size : 512 MB (512 MB above Recommended)· VGA card resolution : 1024 x 768 or above· VGA card memory : 64 MB or above· Network bandwidth: In VGA resolution mode, minimum upload bandwidth is 1.5 ~ 2Mbps.

-
- NOTE:**
1. *The listed information is minimum system requirements only. Actual requirement will vary depending on the nature of your environment.*
 2. *The IP camera can be managed by PLANET Cam Viewer Plus if you want to configure more detail information and settings of camera viewer plus software please refer to the CD-ROM folder "**D:\Manual\Cam Viewer Plus**", assume D is your CD-ROM drive.*
-


2.2 Physical Description

2.2.1. Front Panel

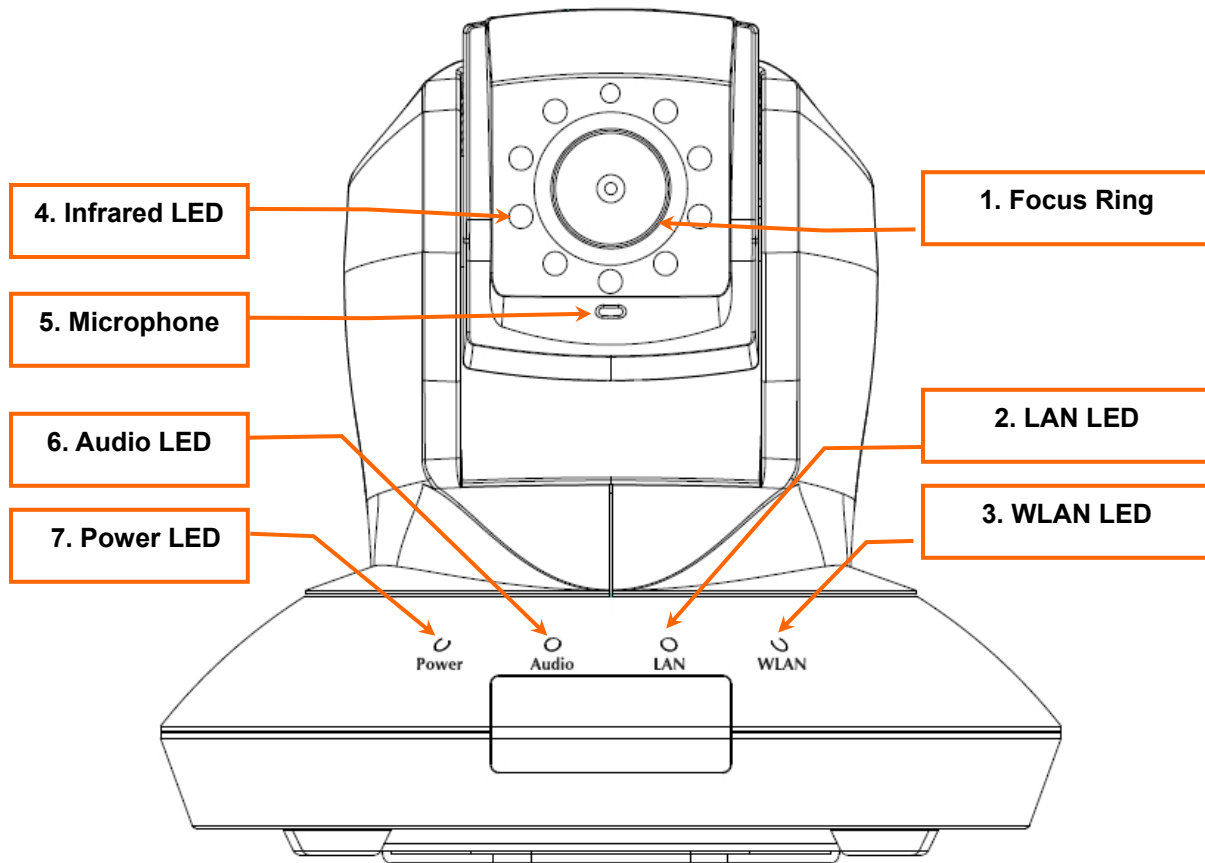


- | | |
|-----------------|---|
| 1. Focus Ring | User could use this ring to adjust focus manually. |
| 2. LAN LED | The LED indicates LAN activity.
It be flashing while network accessing via Ethernet. |
| 3. WLAN LED | The LED indicates the wireless accessing of the IP camera.
Light be flashing while transferring via wireless LAN. If be flashing at low speed once a second indicated that waiting for WPS connection form AP. |
| 4. Infrared LED | Lights up when environment is too dark |
| 5. Microphone | The Camera has built-in an internal microphone. This microphone is hidden in the pinhole located on the front panel. |
| 6. Audio LED | The LED indicates the audio activity, when it be flashing while speak function enable, if volume adjust to 0 the function will be disable. |
| 7. Power LED | The LED is used to indicate DC power status. |

2.2.2. Rear Panel

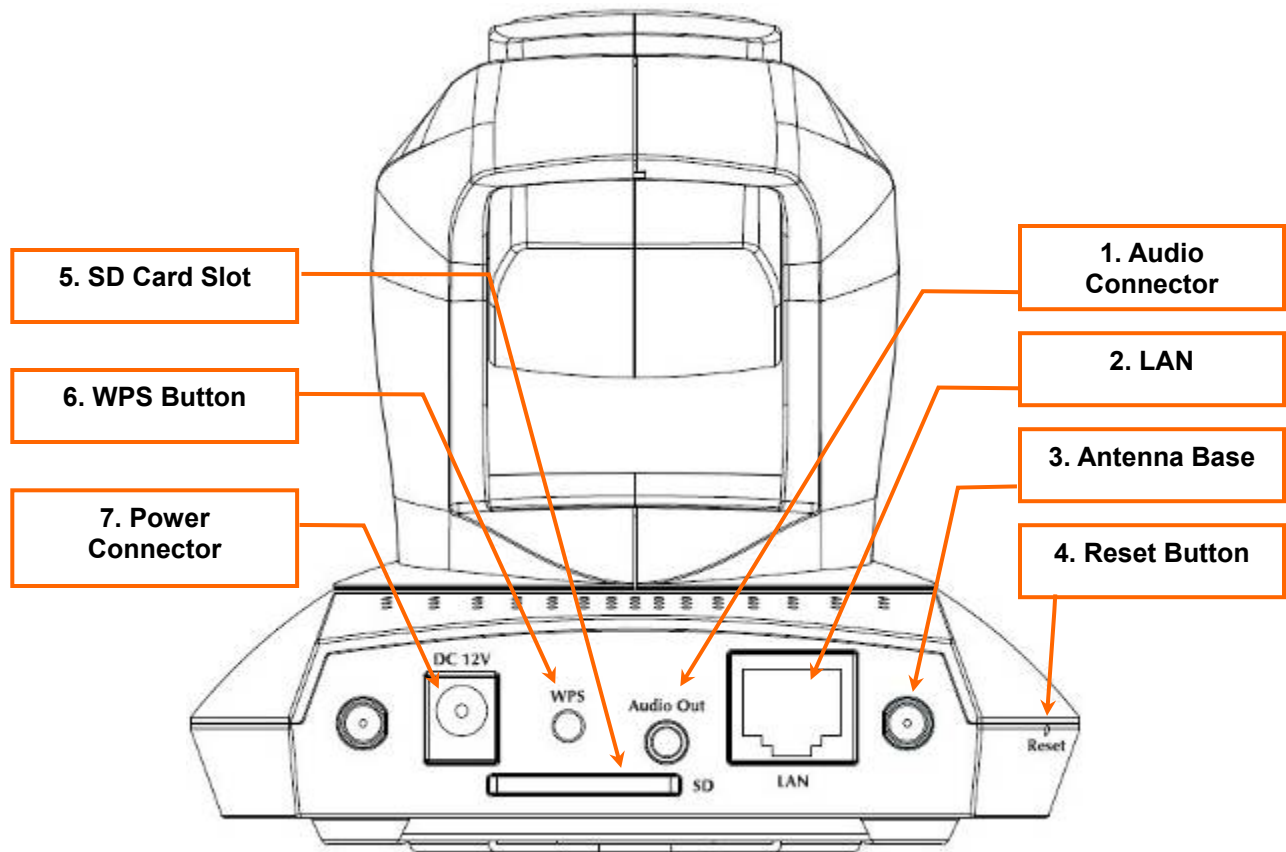

1.	Audio Connector	Audio-Out allows device to output audio or alerting sound.
2.	LAN	This is a RJ-45 connector for connections to 10/100 Base-TX Ethernet cabling and built N-Way protocol can detect or negotiate the transmission speed of the network automatically.
3.	Antenna Base	Allows device connects to the supplied antenna.
4.	Reset Button	Press the button with pen nib and hold for 5 seconds to reset the camera settings to factory default value.
5.	SD Card Slot	Accepts SD / SD-HC memory card for image / video storage
6.	WPS Button	Press the button on IP Cam and press it on the AP you want to connect for wireless.
7.	Power Connector	The input power is 12VDC, 1A. Only use the power adapter supplied with IP camera, otherwise the product may be damaged.

2.2.3. Bottom Panel

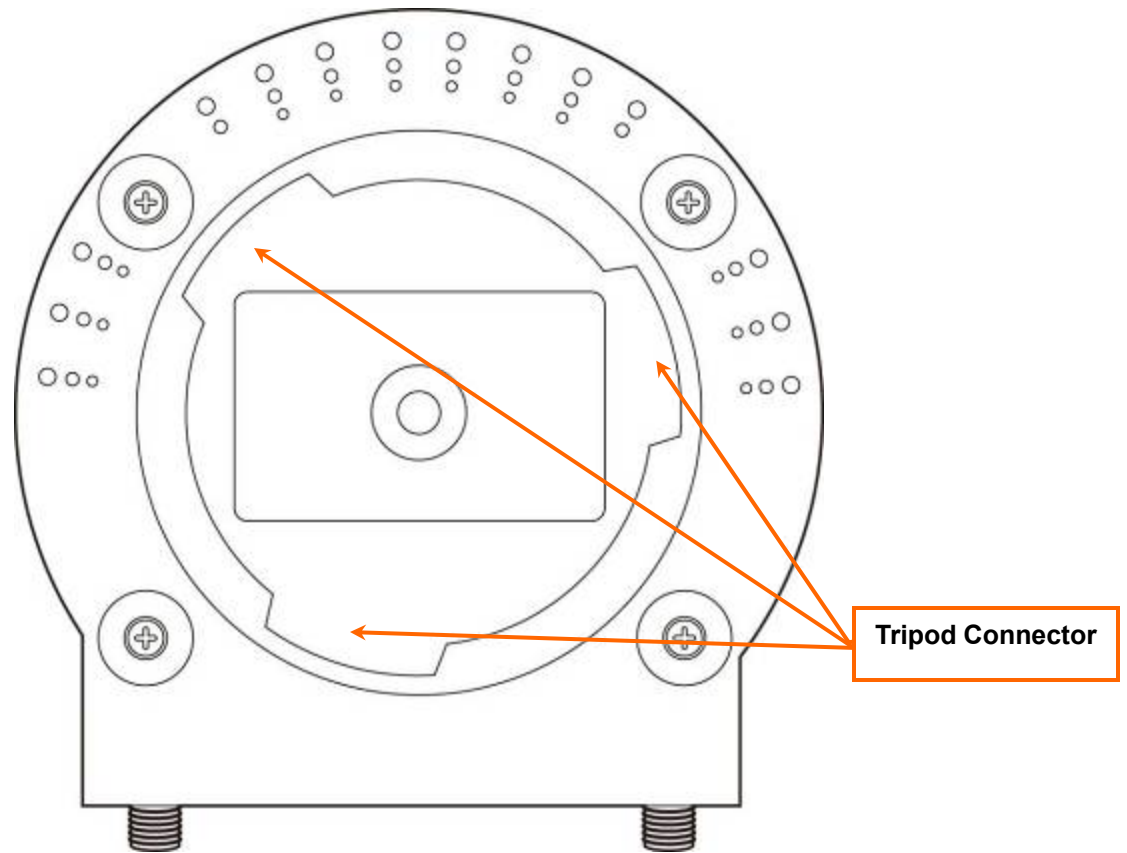

Tripod Connector:

Allows connects to tripod to secure the camera when the camera is not put on a horizontal surface.

2.3 Hardware Installation

2.3.1. Camera Physical Installation

Please follow the following instructions to set your IP camera up.

1. Unpack the product package and check if anything's missing.
2. Connect the Ethernet cable to your local area network, and connect the other end to the LAN jack of this IP camera.



Plug the power adapter to wall socket, and connect the power connector to the power jack located at the bottom of the IP camera,



3. Connect two antennas to the antenna bases, which is located at the back of the IP camera.



4. Place the camera at a secure place, and point the camera to the place you wish to monitor. If you wish to hang the camera on the ceiling or wall, please use the tripod connector (located at the bottom of the camera) to secure the camera.




5. Launch Internet Explorer on your computer, and following the instructions given in next section to set the IP camera.

2.3.2. Locate the IP Address of this IP Camera


Default IP address of this IP camera is **192.168.0.20**. If you wish to assign another IP address to this IP camera, you have to log onto the web configuration interface of the camera first.

If the left three fields of the IP address of your computer is not 192.168.0.x, you'll have to change the IP address of your computer first:


1. Click **Start** → **Control Panel**

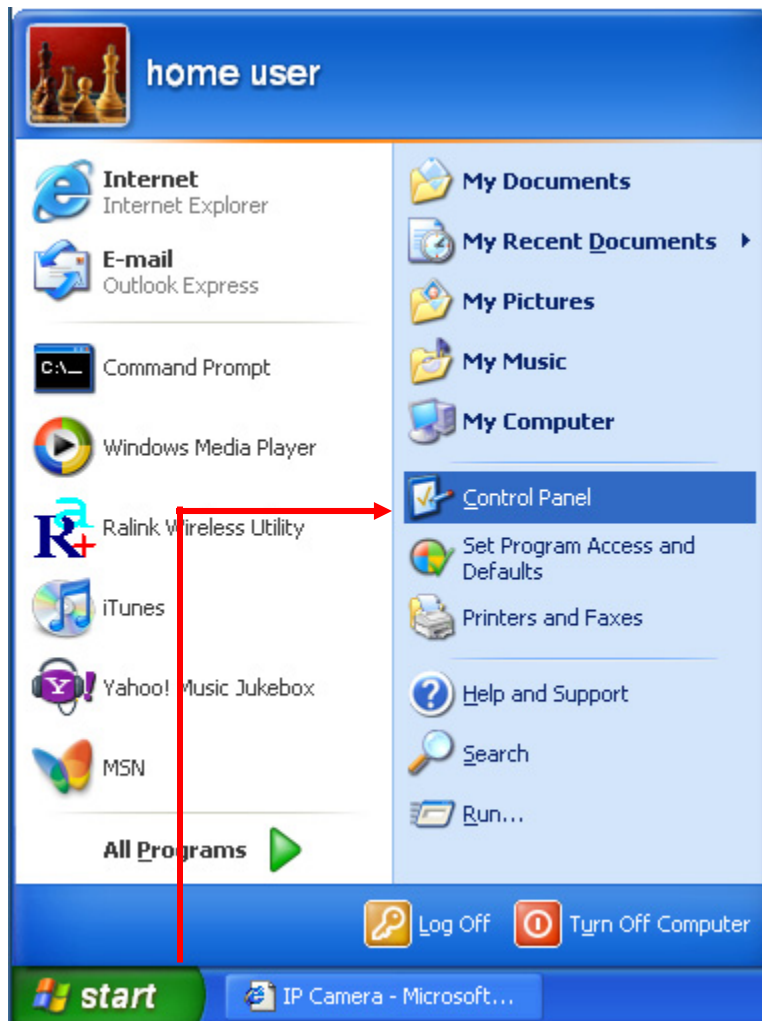


2. Double-click **Network Connections** icon.

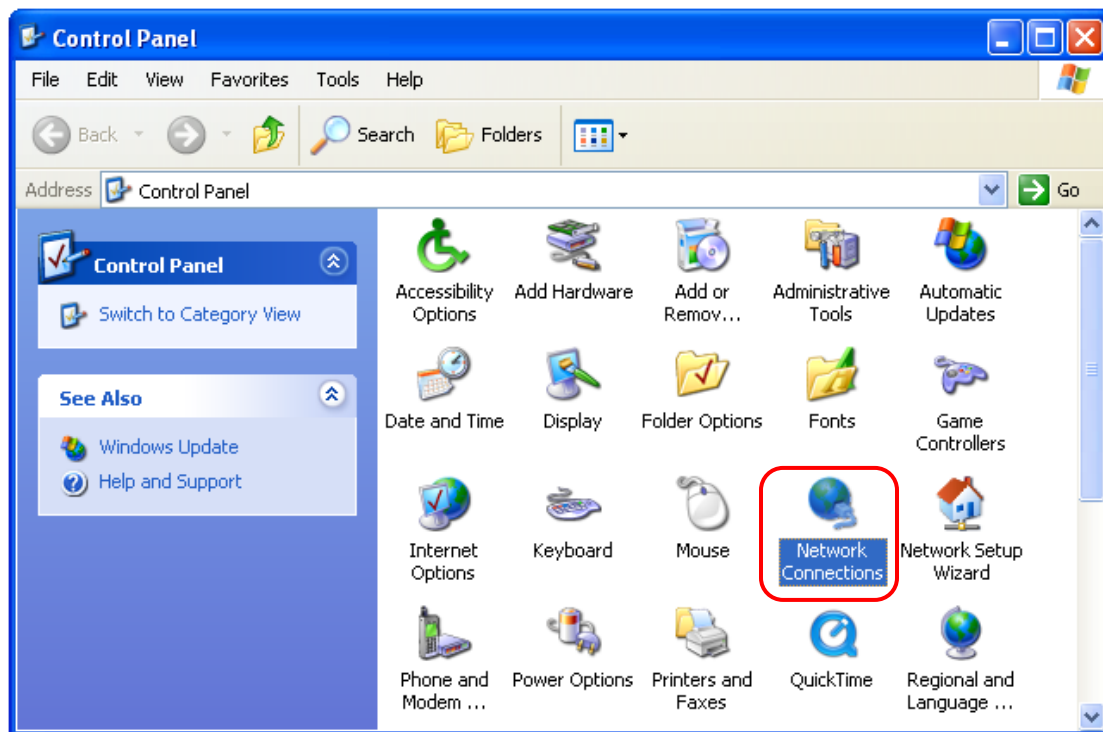


3. Right-click **Local Area Connection**, and click **Properties**.

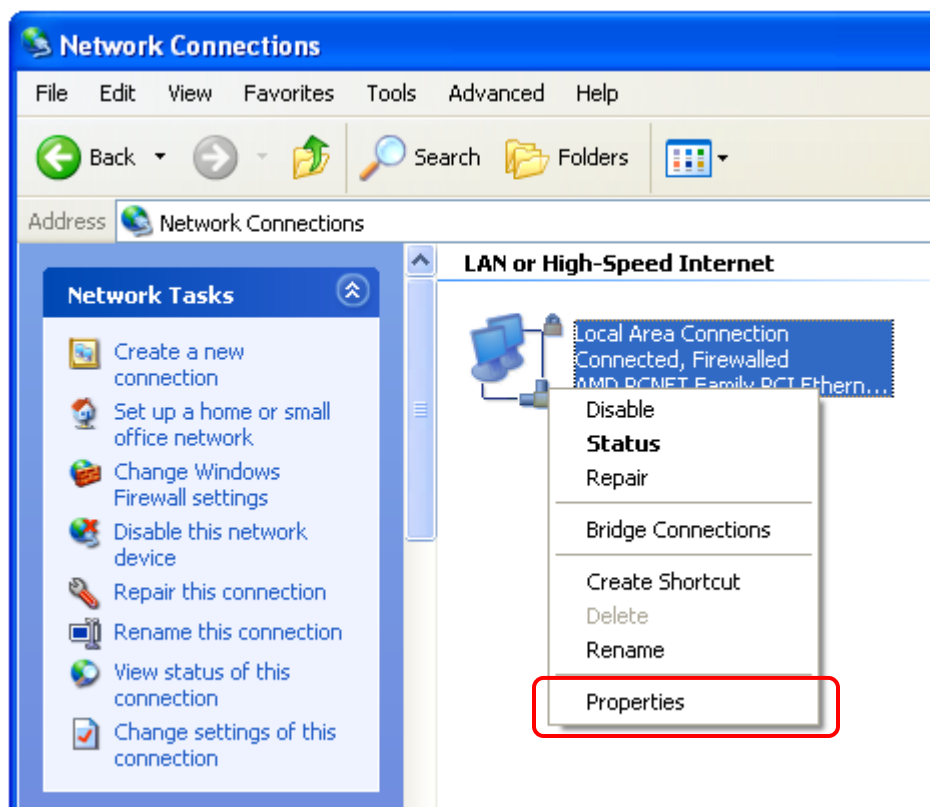

4. Select “**Internet Protocol (TCP/IP)**”, then click **Properties**.

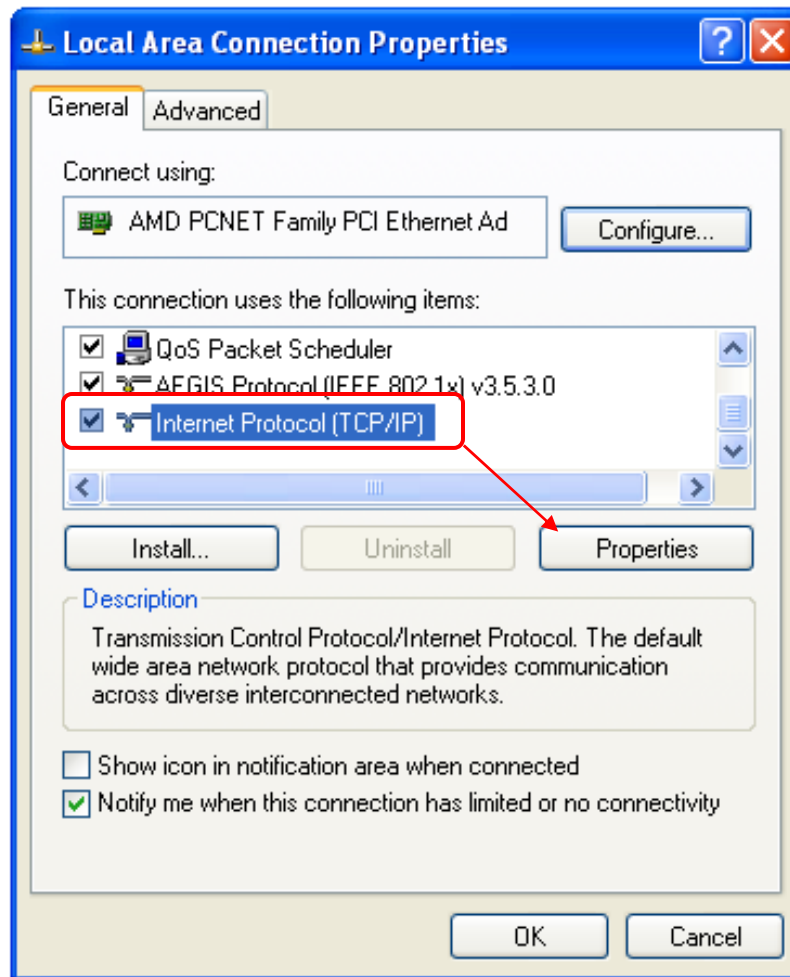

5. In **IP address** field, please fill in any IP address begins with **192.168.0**, and ends with a value greater than 2 and less than 254 (You can use the following example 192.168.0.239). In Subnet mask field, please fill 255.255.255.0. Please keep all other fields empty, and click **OK**.

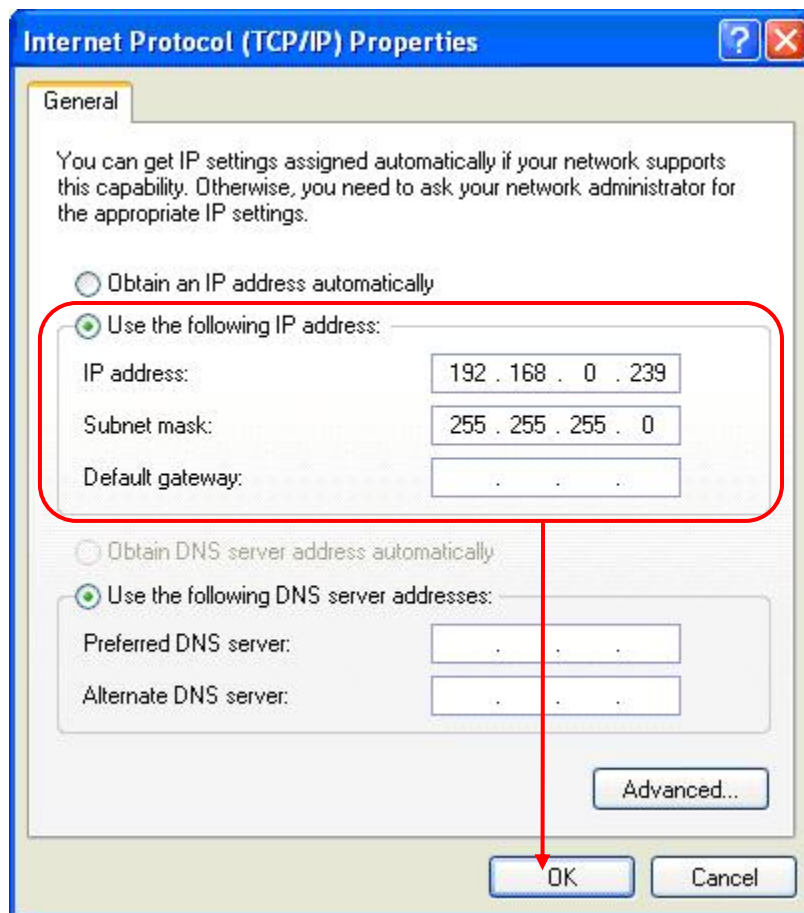

If you changed the IP address of this IP camera and you forget it, there're 2 methods to recover it:

- Press and hold the **Reset** button located at the bottom of this IP camera, to clear all settings of the IP camera and reset the IP address back to **192.168.0.20**. You'll lose all settings in the IP camera.
- Ask network administrator to check the DHCP release table, if the camera was set to obtain the IP address by DHCP, a new record will be added to DHCP release table on DHCP server when the IP camera is connected to the local area network.


2.4 Initial Utility Installation

This chapter shows how to quick set up your IP camera. The Camera is with the default settings. However to help you find the networked camera quickly the admin software can search the cameras in the network that shall help you to configure some basic setting before you started advanced management and monitoring.


Please insert the bundle CD-ROM supplied in the product package, and the CD will automatically running a welcome page, please click your IP camera model name to next page. If the welcome page doesn't appear, please run this installation manually, you can find the utility in **E:\Utility\Utility\Admin Software\Setup.exe**. Suppose "E" is your CD-ROM drive.

Then follow the following instructions to install and use camera admin software:


1. Click **Next** to start install camera admin software:

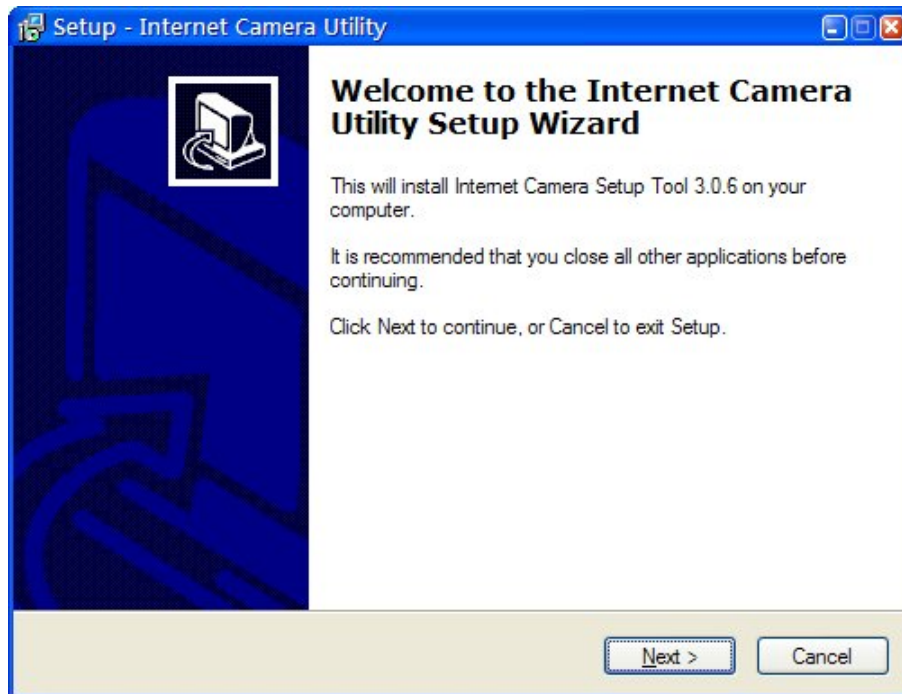


2. You can change the installation folder of camera setup software here, click **Browse** to select an existing folder, or you can just click **Next** to use default installation folder:

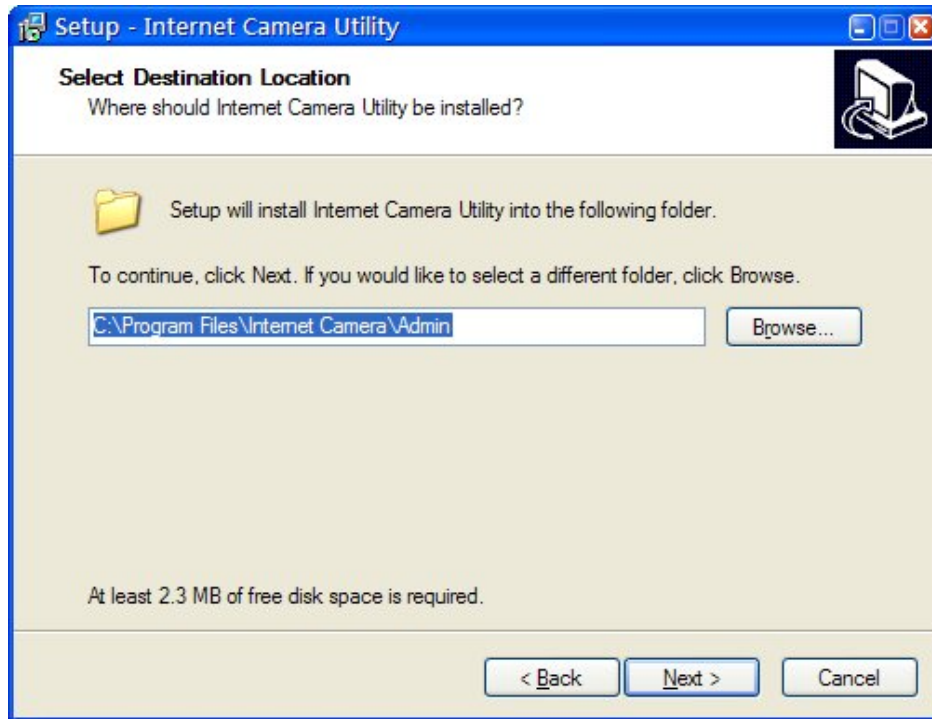

3. If you wish to create desktop icon and / or quick launch icon for camera admin software, please check corresponding box, and click **Next** to continue.

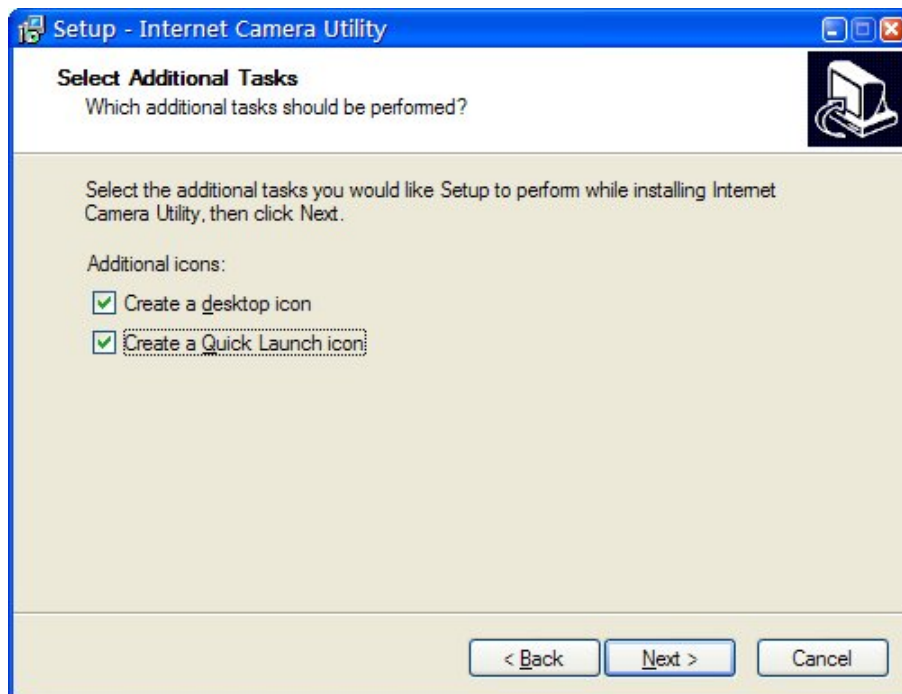

4. You'll see a brief of all options you selected, click **Install** to install camera admin software now, or click **back** to back to previous steps to change settings.

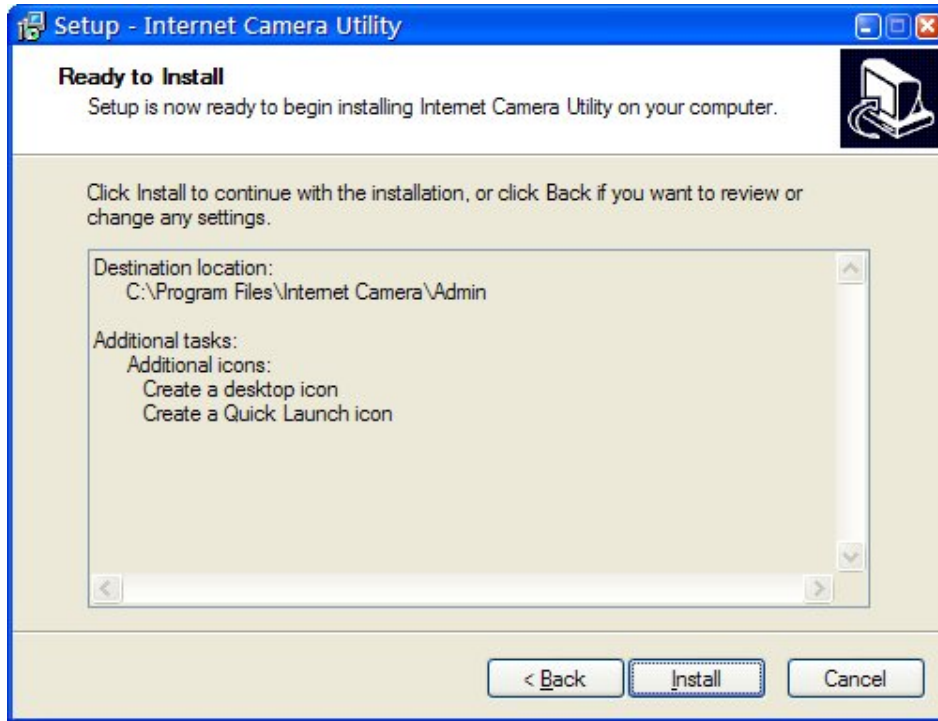


5. When you see this message, the installation of camera admin software is complete. If you wish to launch camera admin software now, keep **Launch IP Cam Admin Utility** box checked, and click **Finish** to close installation utility.




6. Please double-click the utility icon on the desktop then you will see the IP camera utility.


After the camera admin software is launched, all cameras found on your local area network will be displayed:

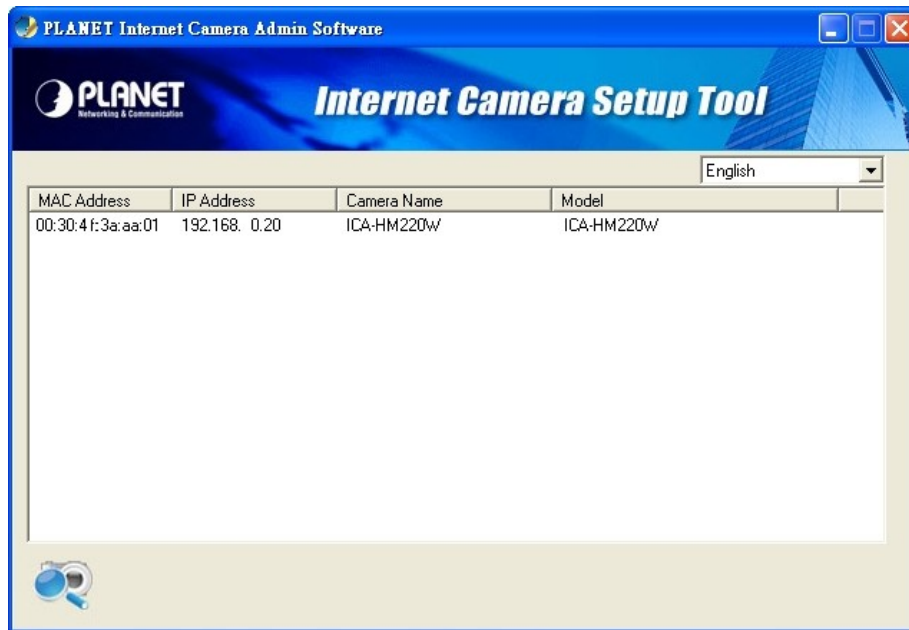

All camera-related information will be displayed here. If you wish to connect to certain camera by web browser, double-click the camera listed here.

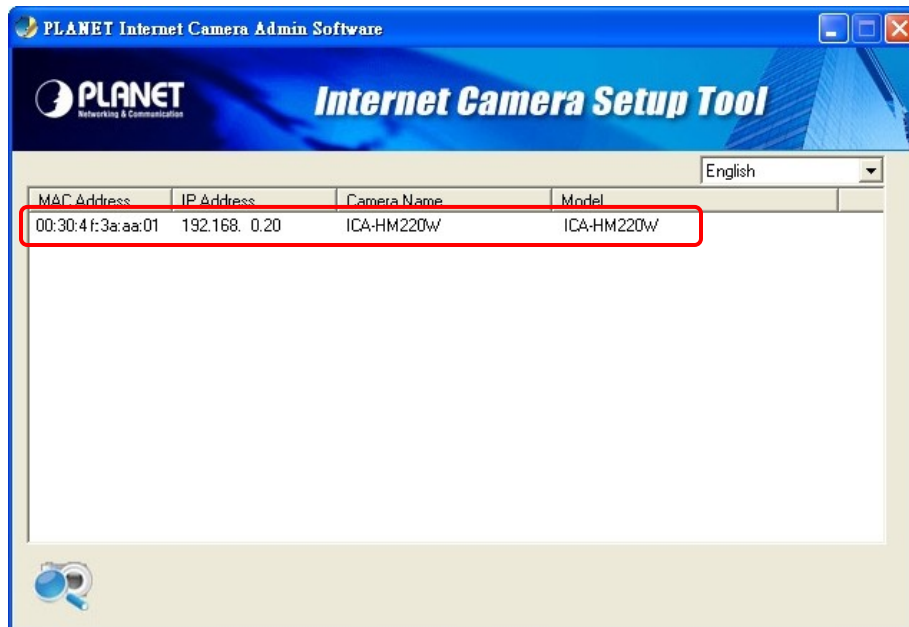

The camera admin software also provides several functions:

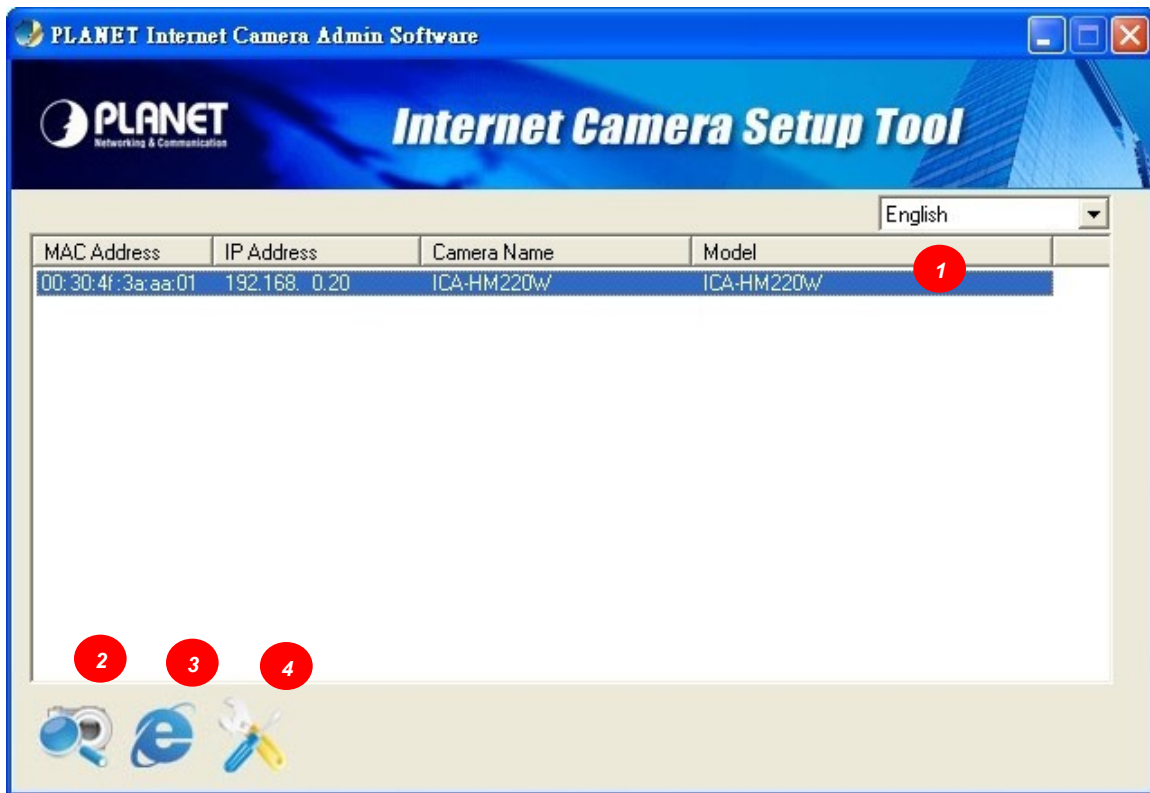

This camera admin software supports 3 languages:

1 Language

English, Chinese, and Japanese. User can select the language oneself wish to use from language dropdown menu located at upper-right corner of camera admin software.

2



Search camera:

Click this button to search all cameras on local area network again.

3



Browse camera via web:

Select a camera listed above first, and then click this button to connect to the camera by web browser.

4




Configure camera:

Click this button to configure camera's network and security setting. You'll be prompted to input camera's password:


2.5 Camera Admin locate IP Camera

If you can't connect to the camera by the instructions given in last chapter, you can use camera admin software to search the camera which is connected to your local area network. The admin software is also capable to locate multiple cameras on your local area network.

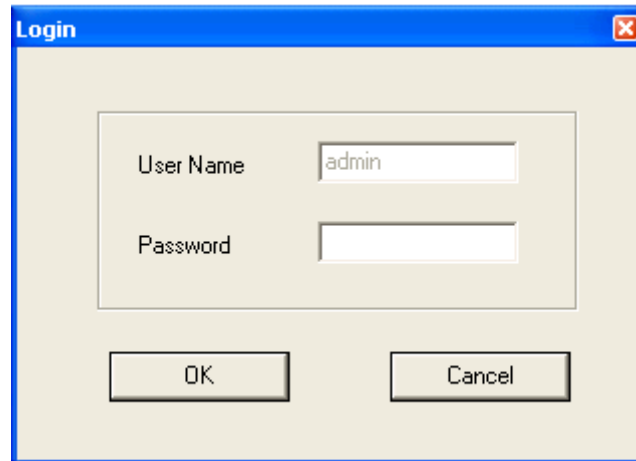

A login dialog box titled "Login" with a blue border. It contains two text input fields: "User Name" with the value "admin" and "Password" which is empty. Below the fields are two buttons: "OK" and "Cancel".


Input the password (default: **admin**) and click **OK** to configure the camera's network and security setting:

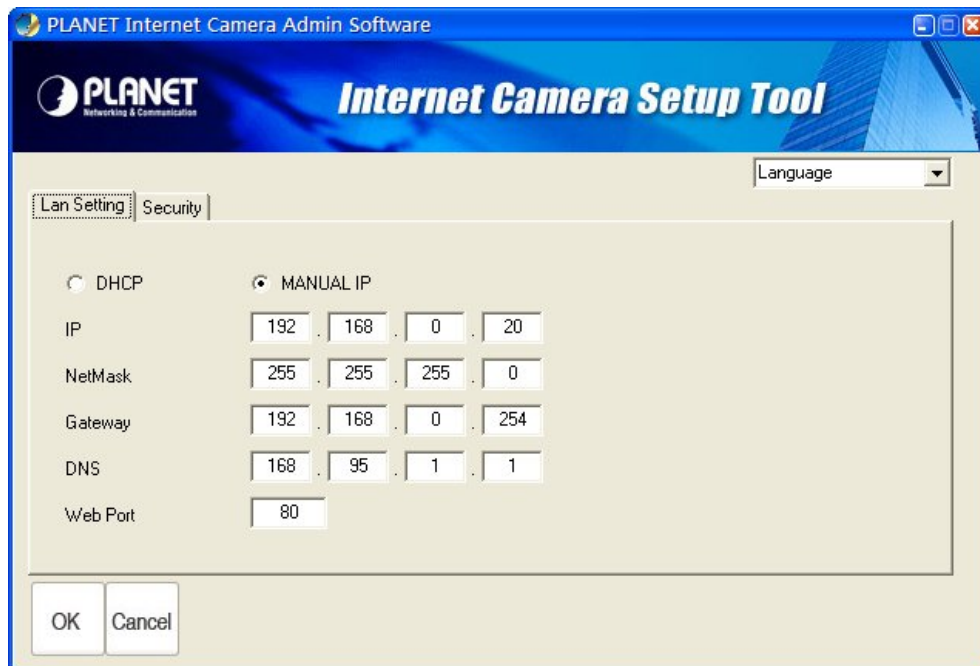

The main window of the "PLANET Internet Camera Admin Software" titled "Internet Camera Setup Tool". It features a blue header with the PLANET logo and a "Language" dropdown menu. Below the header are two tabs: "Lan Setting" (selected) and "Security". The "Lan Setting" tab contains two radio buttons: "DHCP" (unselected) and "MANUAL IP" (selected). Below these are five rows of IP configuration fields: "IP" (192, 168, 0, 20), "NetMask" (255, 255, 255, 0), "Gateway" (192, 168, 0, 254), "DNS" (168, 95, 1, 1), and "Web Port" (80). At the bottom are "OK" and "Cancel" buttons.

In **Lan Setting** page, user can configure camera's network settings. Select **DHCP** to set the camera to obtain an IP address from DHCP server on local area network automatically, and select **Manual IP** to input the IP address information manually. Click **OK** to save settings.

In **Security** page, user can change the camera's name and password (user name is always 'admin' and cannot be changed). You have to input the same password in both **New Password** and **Confirm Password** field, or you'll be prompted to input new password again. Click **OK** to save settings or click **Cancel** to discard changes.

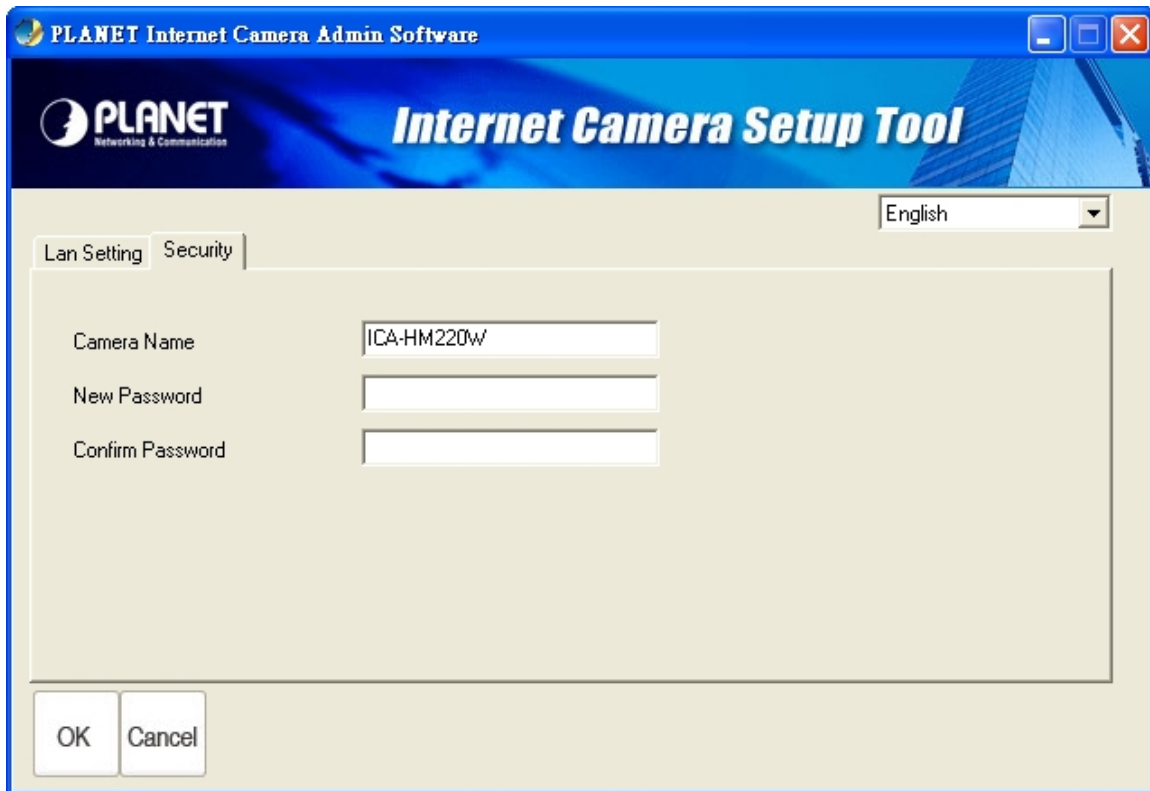

The screenshot shows the 'PLANET Internet Camera Admin Software' window. The title bar includes the PLANET logo and the text 'PLANET Internet Camera Admin Software'. The main header area features the PLANET logo on the left and the title 'Internet Camera Setup Tool' in a large, stylized font on the right. Below the header, there is a language dropdown menu set to 'English'. The main content area has two tabs: 'Lan Setting' and 'Security', with 'Security' being the active tab. Under the 'Security' tab, there are three input fields: 'Camera Name' (containing 'ICA-HM220W'), 'New Password', and 'Confirm Password'. At the bottom of the window, there are two buttons: 'OK' and 'Cancel'.


2.6 Using UPnP of Windows XP or Vista

Universal Plug and Play (UPnP) is a set of computer network protocols. This is to allow device to connect seamlessly and to simplify the implementation of network in the network and corporate environments.


2.6.1. Windows XP

This device is an UPnP enabled device. If the operating system, Windows XP, of your PC is UPnP enabled, the device will be very easy to configure. Use the following steps to enable UPnP settings only if your operating system of PC is running Windows XP.


Go to **Start** → **Settings**, and Click **Control Panel**

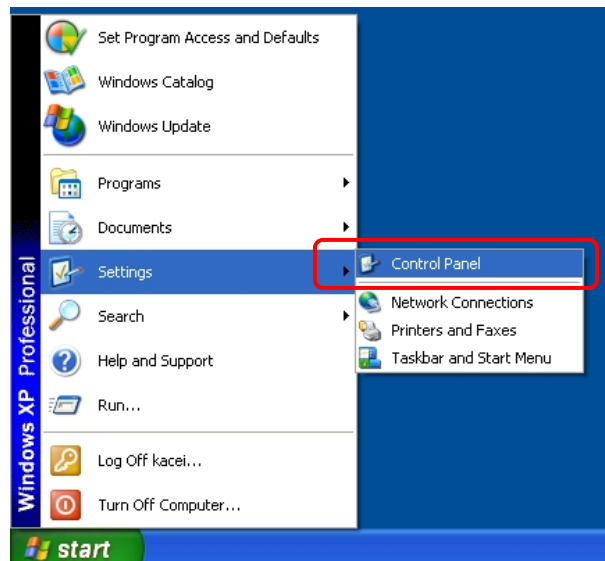


The **Control Panel** will display on the screen and double click **Add or Remove Programs** to continue

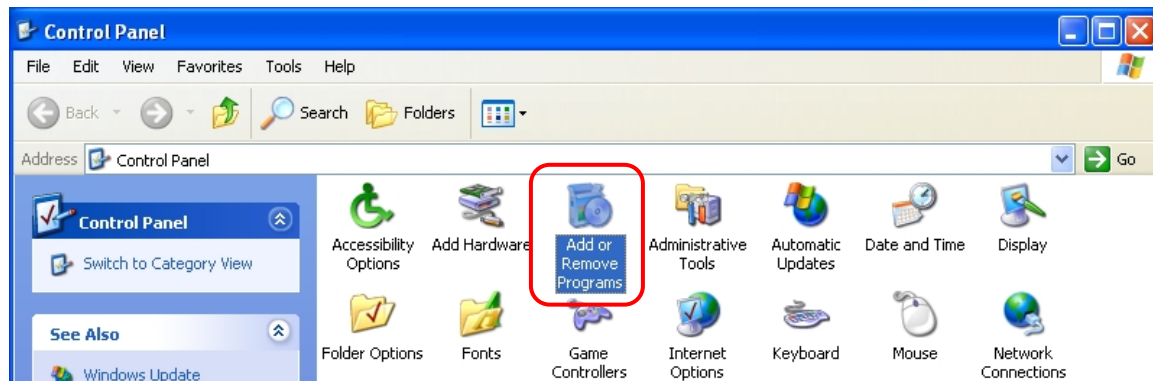


The **Add or Remove Programs** will display on the screen and click **Add/Remove Windows Components** to continue.

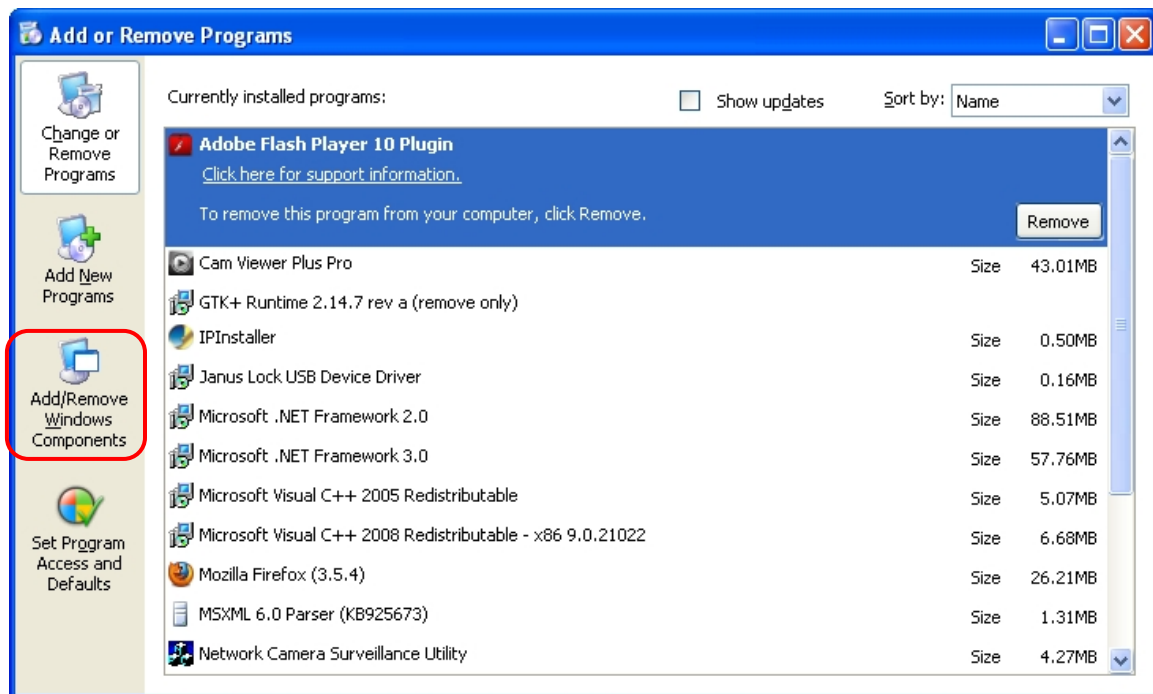


The following screen will appear, select **Networking Services** and click **Details** to continue

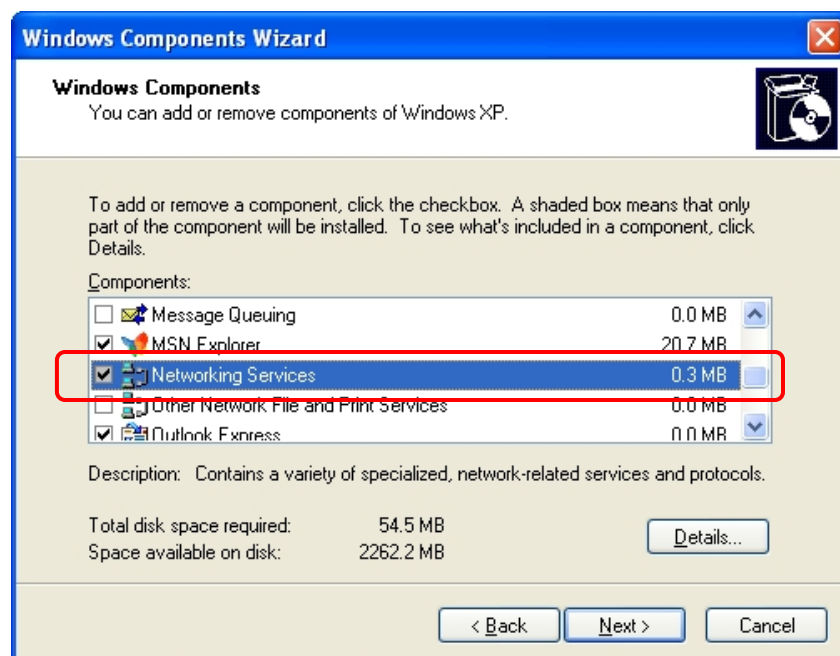


The **Networking Services** will display on the screen, select **Universal Plug and Play** and click **OK** to continue.

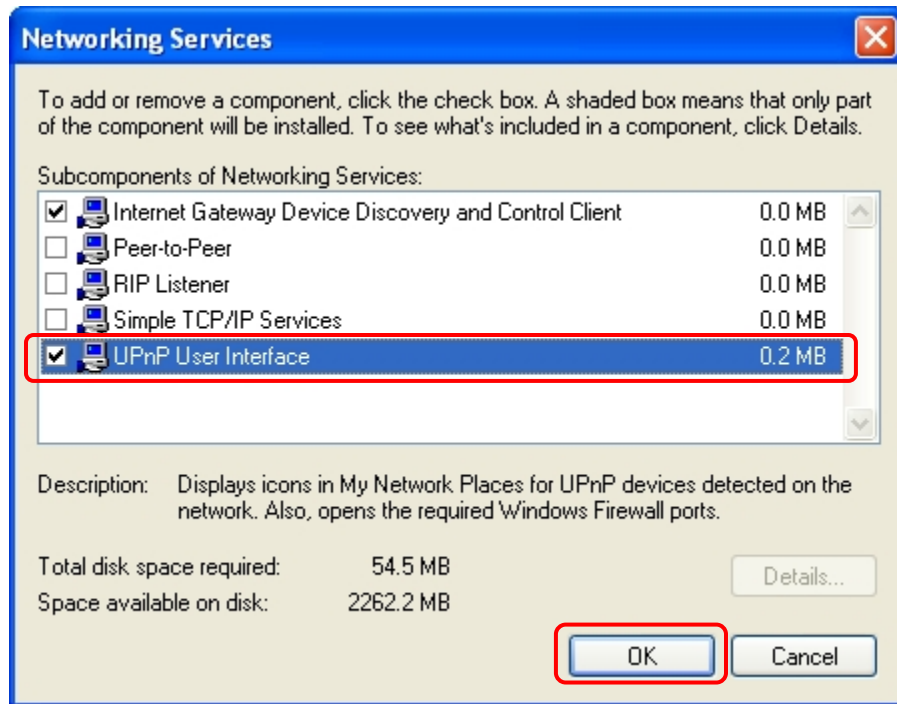

Please click **Next** to continue

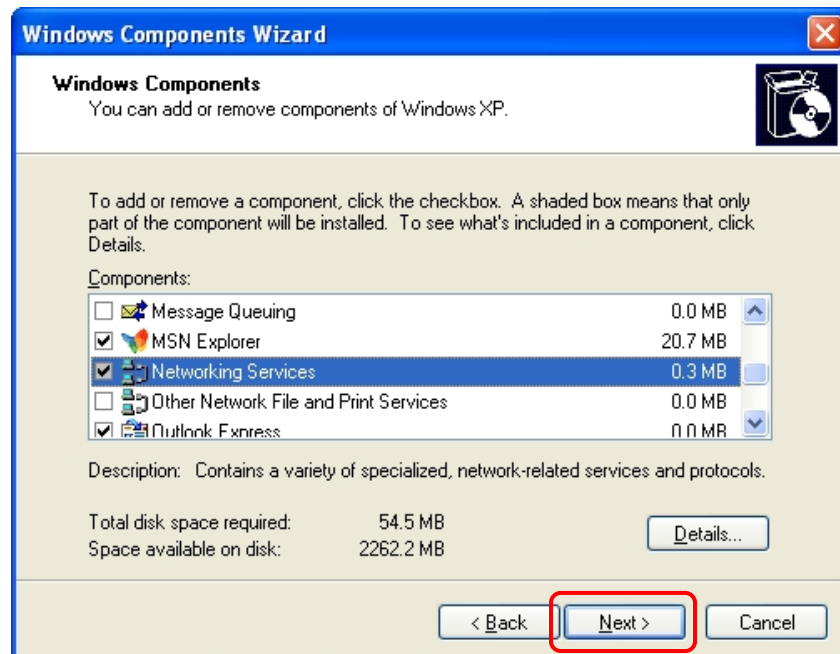


The program will start installing the UPnP automatically. You will see the below pop-up screen, please wait while Setup configures the components.

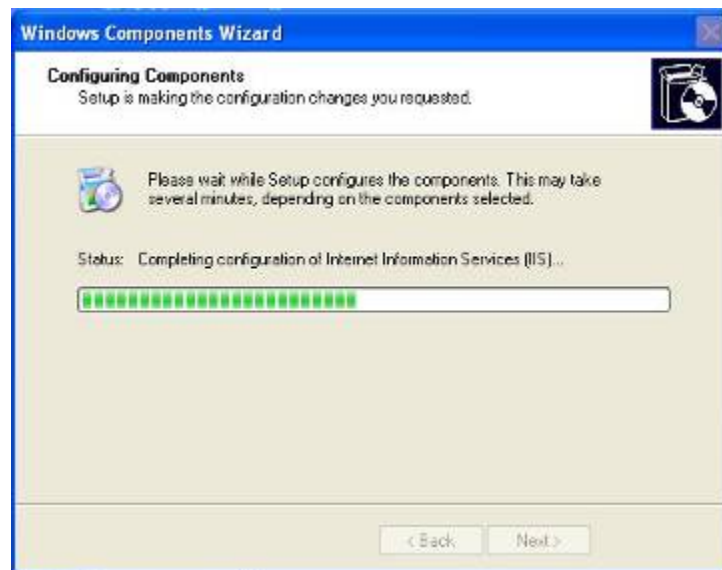

Please click **Finish** to complete the UPnP installation




Double-click **My Network Places** on the desktop, the My Network Places will display on the screen and double-click the **UPnP** icon with IP camera to view your device in an internet browser.

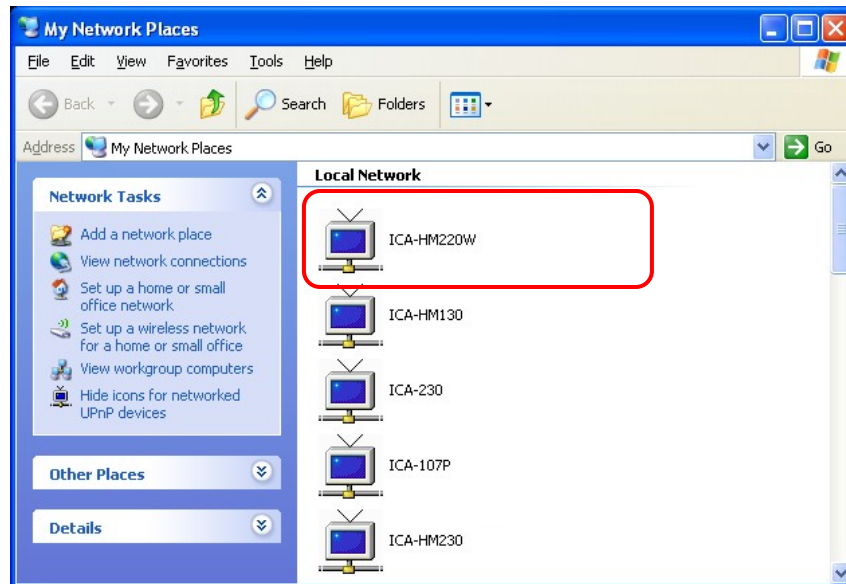


2.6.2. Windows Vista

If the operating system, Windows Vista, of your PC is UPnP enabled, the device will be very easy to configure. Use the following steps to enable UPnP settings only if your operating system of PC is running Windows Vista.

Go to **Start → Control Panel → Network and Internet → Network and Sharing Center**, and turn on **Network Discovery**.

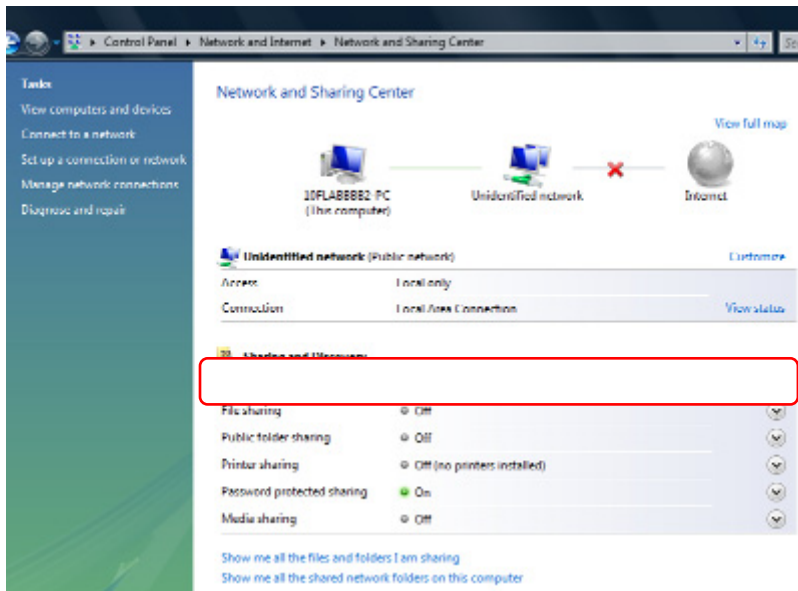

Double-click **My Network Places** on the desktop, the **My Network Places** will display on the screen and double-click the **UPnP** icon with IP camera to view your device in an internet browser.

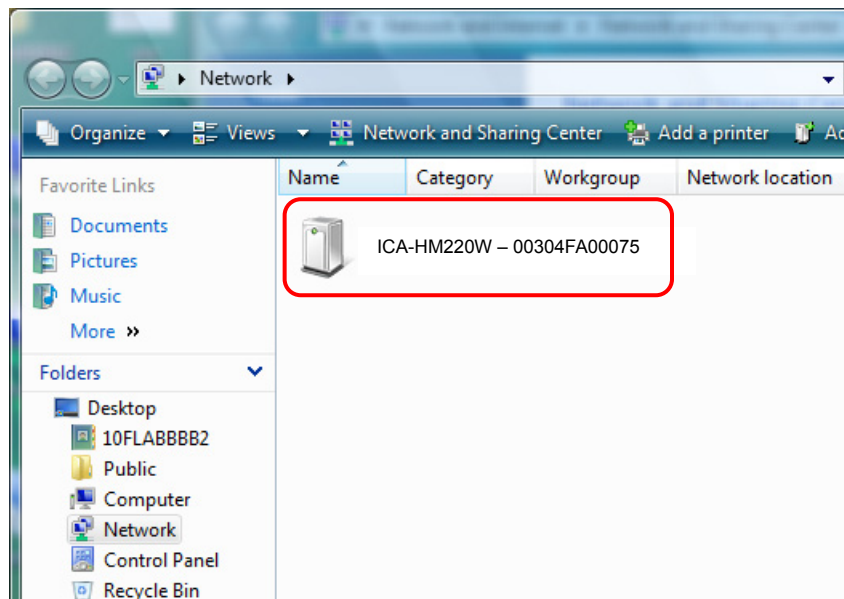

2.7 Setup ActiveX to use the IP Camera


The IP camera web pages communicate with the IP camera using an ActiveX control. The ActiveX control must be downloaded from the IP camera and installed on your PC. Your Internet Explorer security settings must allow for the web page to work correctly. To use the IP camera, user must setup his IE browser as follows:

2.7.1. Internet Explorer 6 for Windows XP

From your IE browse → **Tools** → **Internet Options...** → **Security** → **Custom Level...**, please setup your **Settings** as follow.

Set the first 3 items

- Download the signed ActiveX controls
- Download the unsigned ActiveX controls
- Initialize and script the ActiveX controls not masked as safe to Prompt

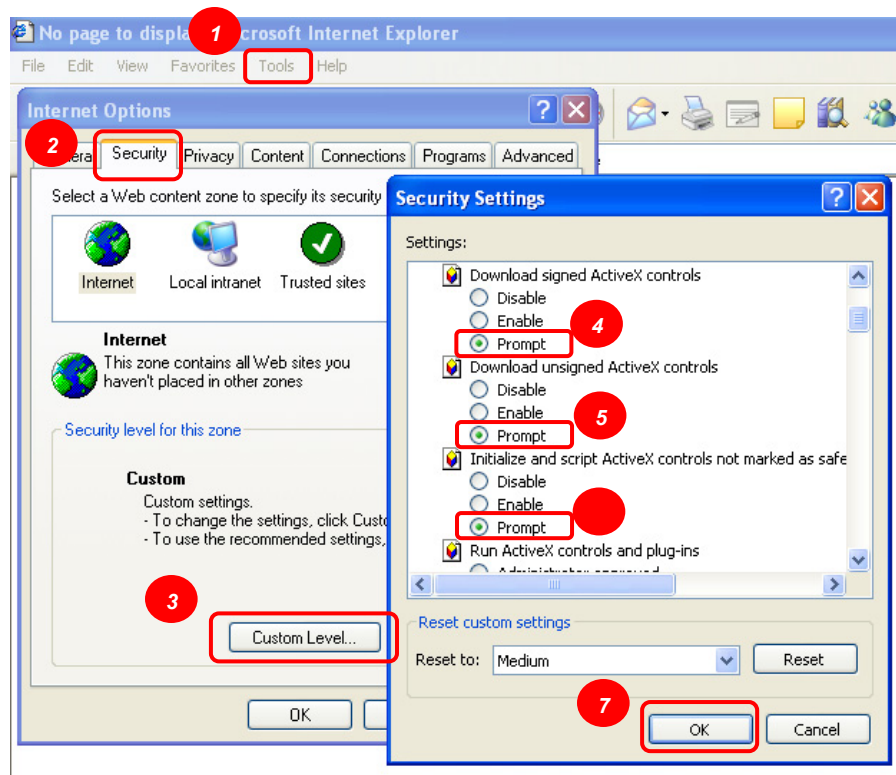


By now, you have finished your entire PC configuration for IP camera.

2.7.2. Internet Explorer 7 for Windows XP

From your IE browse → **Tools** → **Internet Options...** → **Security** → **Custom Level...**, please setup your **Settings** as follow.

Set the first 3 items

- *Allow previously unused ActiveX control to run...*
- *Allows Script lets*
- *Automatic prompting for ActiveX controls*


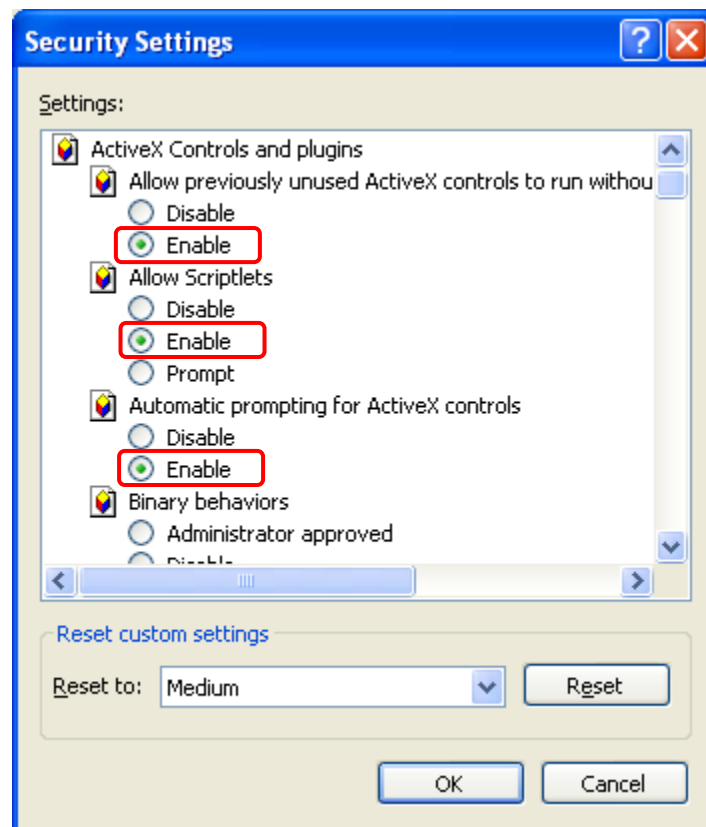


By now, you have finished your entire PC configuration for IP camera.

2.7.3. Internet Explorer 7 for Windows Vista



From your IE browse → **Tools** → **Internet Options...** → **Security** → **Internet** → **Custom Level...**, please setup your **Settings** as follow.

- Enable 'Automatic prompting for ActiveX controls'
- Prompt 'Initialize and script active controls not marked as safe....'

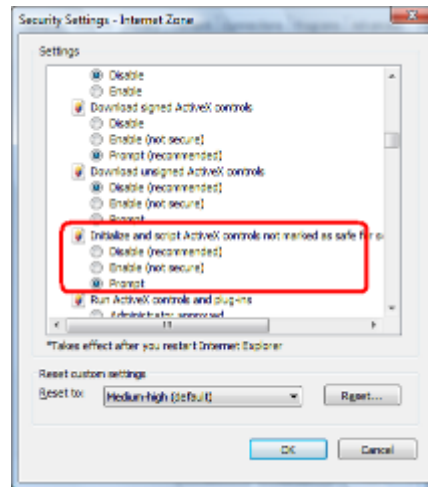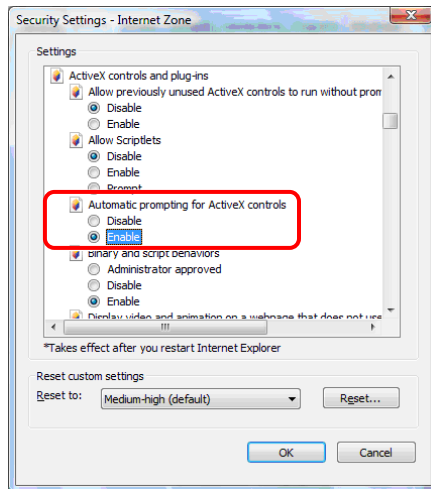

From your IE browse → **Tools** → **Internet Options...** → **Security** → **Trusted Sites** → **Custom Level...**, please setup your **Settings** as follow.

- Enable 'Automatic prompting for ActiveX controls'
- Prompt 'Initialize and script active controls not marked as safe....'

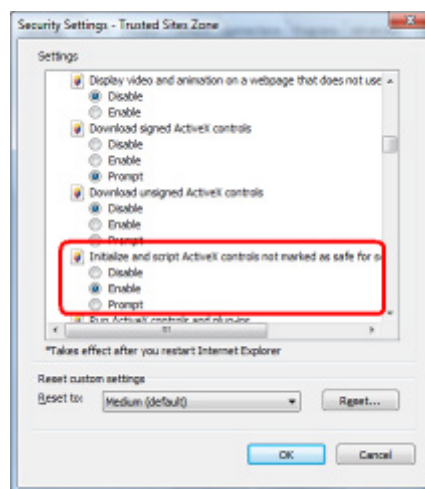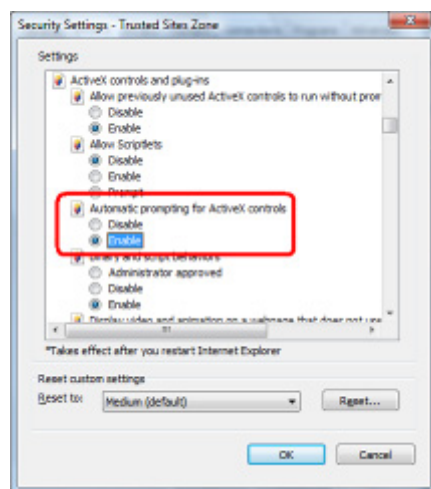

By now, you have finished your entire PC configuration for IP camera.

3. Web-based Management Interface

This chapter provides setup details of the IP camera's Web-based Interface.


3.1 Introduction

The ICA-HM220W can be configured with your Web Browser. Before configure, please make sure your PC is under the same IP segment with IP camera.

3.2 Connecting to IP Camera

- Use the following procedure to establish a connection from your PC to the IP camera.
- Once connected, you can add the IP camera to your Browser's Favorites or Bookmarks.

Make sure the IP camera is correctly powered (Power LED is on), and then launch Internet Explorer and type the IP address of the IP camera in address bar of Internet Explorer. The Default IP: **http://192.168.0.20**.



You should be prompted to input the user name and password. Default username and password is **admin/admin**. Click **OK** to continue after user name and password has entered.




If you're rejected, maybe the password has been modified previously. This should not happen if this is a newly-purchased camera, however, if you get the camera from someone else, the password would be changed. Please try to obtain the correct user name / password, or you'll have to reset the camera.

Note


If the User name and Password have been changed with Admin utility, please enter the new User name and Password here.

After the ActiveX control was installed and run, the first image will be displayed.


You should be able to see the images captured from the camera in the web page now. For advanced functions, please refer to instructions given in follows chapters.

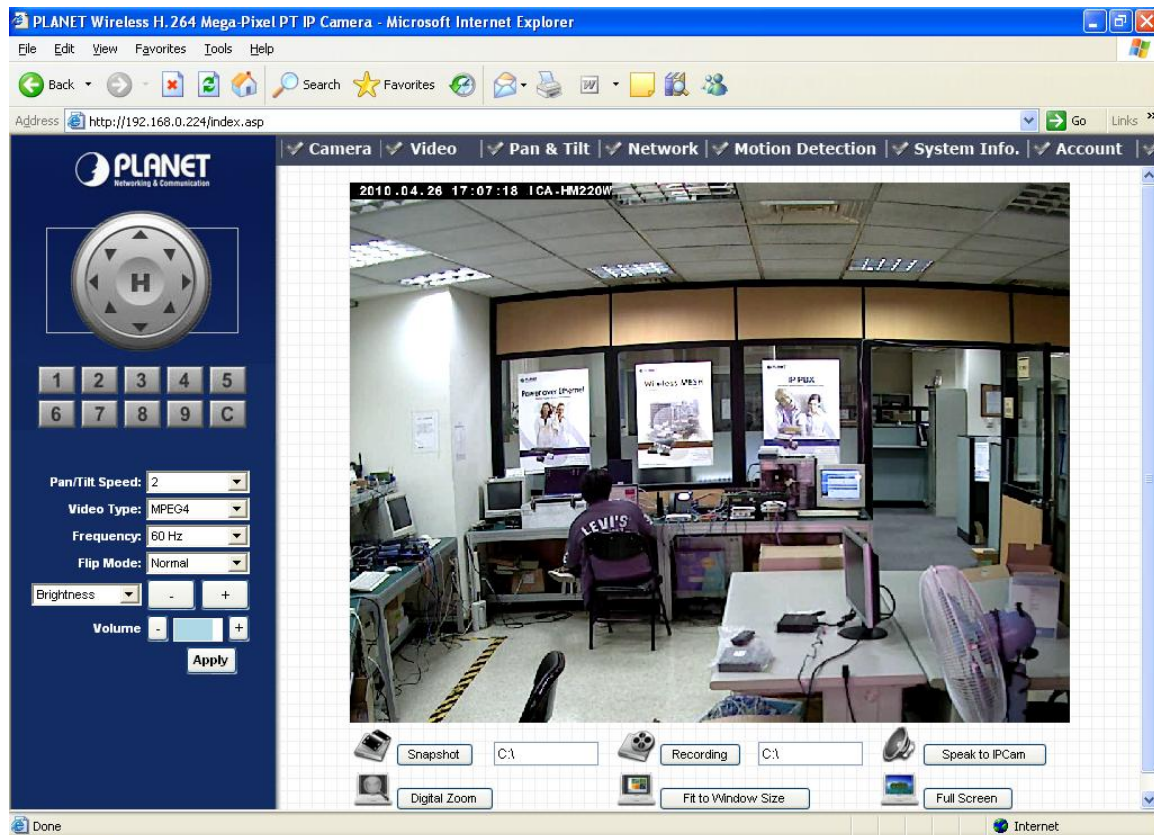

If you see one of these messages (or both):

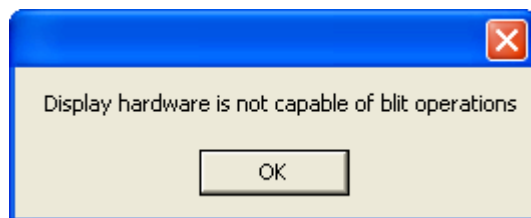

OR

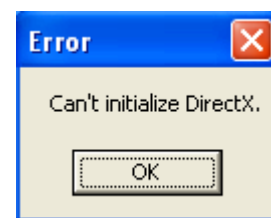


Your computer may not have the display capability that this IP camera requires, or you don't have Microsoft DirectX® installed. Please download Microsoft DirectX® from Microsoft's website (<http://www.microsoft.com>), and try again.

In some cases, your computer is able to display the image from IP camera correctly, but you'll still see these messages. If this happens, just ignore them


3.3 Camera Settings

The first menu after you logged onto web management interface is IP camera, and this is the only menu you can see the real-time image from camera.

Start-up screen will be as follow no matter an ordinary users or an administrator.

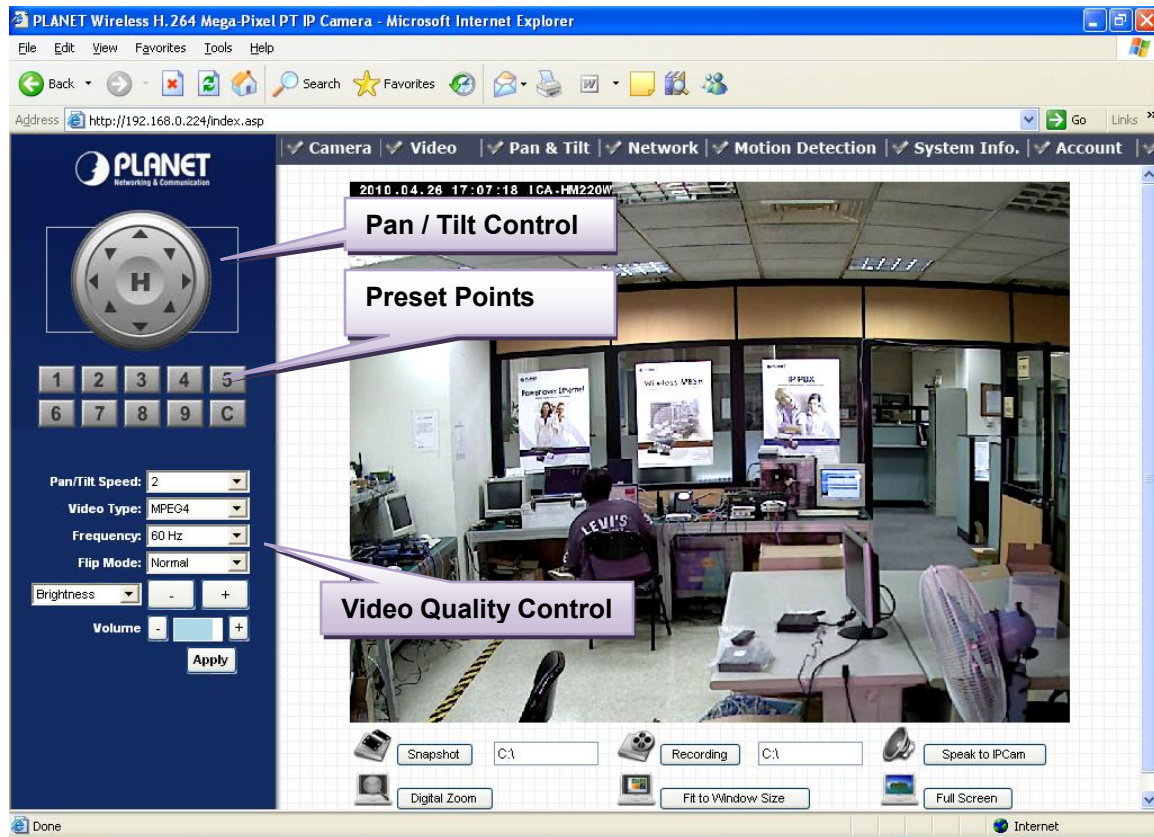

You can always back to this menu by clicking **Camera** on the top of web management interface.



The descriptions of every setting in this menu will be given below:

Pan/Tilt Speed

Specifies the moving speed when you use pan / tilt function to point the camera to a new direction. Available options are **1** (fastest) to **5** (slowest). Select 1 to move the camera by a faster speed, but you will not be able to control the movement precisely. If you want to move the camera in a more accurate manner, select a slower speed.

Video Type

Specifies video encoding type. Available options are 'MPEG4', 'MJPEG', and 'H.264'. Different encoding type requires different bandwidth, and provides different video quality.

Frequency

If the place where this IP camera points to has a (or more) fluorescent light(s), the image may look flashing. In this case, you can adjust this setting to the frequency of electrical power; this can improve the image quality effectively. If you don't know which one you should use, just try any of them and select one with less flickered.

Flip Mode

If you're not putting this camera on a horizontal surface but hang the camera on the ceiling or wall, you can use this function to rotate the displaying image.

Video Quality Control (Brightness, Saturation, Sharpness)

Adjust the video quality by controlling the brightness, saturation, and sharpness of the displaying image, so you can see the image more clearly in certain environment.

Select one of the video quality type (brightness, saturation, or sharpness) from dropdown menu, then click **+** or **-** button to increase / decrease setting.

Volume

Adjust the volume of audio output. Press **+** or **-** button to increase or decrease volume.

Pan / Tilt Control



Moves camera to a new direction. Press one of 8 directional buttons to move the camera, and press **H** to move the camera back to 'home' (original) position.

Preset Points




You can set up to **9** preset points of camera position; press the number to move the camera to preset point instantly. See next chapter for detail instructions of how to set preset points.

Press **C** and the camera will cruise between all preset points automatically.

Snapshot

Click **Snapshot** button to save the displaying image as an image file, a message box will appear after you click **Snapshot** button, showing the filename and location of saved image file (default filename is current date and time).

Default directory used to save image file is **C:**, you can change the directory by clicking the text input box located at the right of 'Snapshot' button:



and you'll be prompted to select a new directory.

Recording

Press this button to record the displaying image as a video file in AVI format, and you can play the video file back by Windows


Media Player. To stop recording, press **Stop Recording** button (the same button). You can also change the directory used to save video file.

Speak to IP Cam

You can transmit the voice received by your computer's microphone to the camera's external speaker. Press and hold this button, then speak to the microphone. Please note that external speaker must be connected to this camera.

Digital Zoom

If you wish to enlarge certain portion of the captured image, you can click this button to set digital zoom:

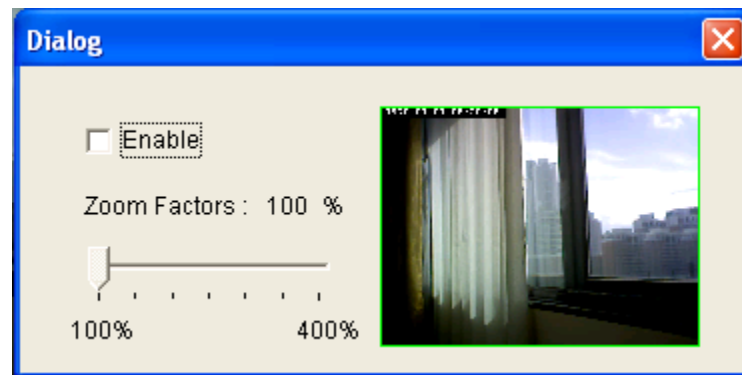

Click **Enable** to enable digital zoom function, then you can drag the slide bar to adjust zoom ratio. You can also use your mouse to drag the zoom area (the yellow square) to reposition the zoom area.

Fit to Window


Click this button and the image size will be adjusted to fit the size of browser window.

Full Screen


Click this button to display the image in full-screen mode (uses every available space to display the image captured by this camera).

3.4 Video Settings

You can change video-related settings of this IP camera in '**Video**' menu. You can access this menu by clicking **Video** on the top of web management interface.



There are 5 types of video settings for this IP camera. To set the option of a certain video setting, put mouse cursor on it and its options will appear.

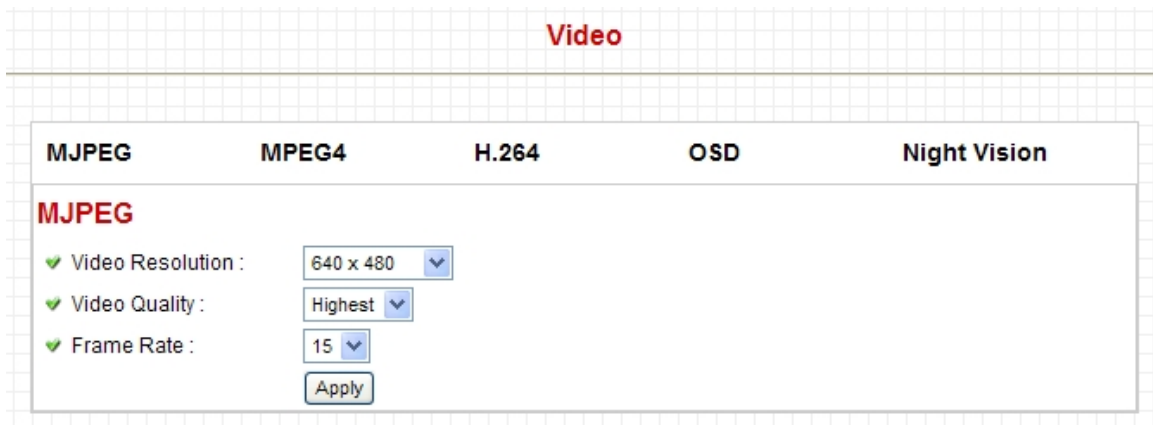

3.4.1. MJPEG

You can adjust video settings when you select '**MJPEG**' as video type in '**Camera**' menu.

MJPEG

✔ Video Resolution : 640 x 480 ▼
✔ Video Quality : Highest ▼
✔ Frame Rate : 15 ▼

The descriptions of every setting in this menu will be given below:

Video Resolution	Changes the resolution of video. Available options are 1280 x 1024, 640 x 480, and 320 x 240. Higher resolution provides better video quality and more detail, but requires more network bandwidth.
Video Quality	Changes video quality. There are 5 levels of video quality from 'Lowest' to 'Highest'. Selecting a higher video quality will provide better video quality, but requires more network bandwidth.
Frame Rate	Changes video frame rate. Available options from '30' to '1', indicates how many video frames this camera will transmit every second. Higher frame rate provides smooth video watching experience and will not lose details of video, but requires more network bandwidth. If you're using this video camera with insufficient network bandwidth, selecting a lower frame rate setting will help.

Click **Apply** for settings to take effect.

3.4.2. MPEG4

You can adjust video settings when you select '**MPEG4**' as video type in '**Camera**' menu.

MPEG4

✔ Video Resolution : 640 x 480 ▼
✔ Video Quality : Highest ▼
✔ Frame Rate : 15 ▼

The descriptions of every setting in this menu will be given below:

Video Resolution	Changes the resolution of video. Available options are 1024 x 768, 640 x 480, and 320 x 240. Higher resolution provides better video quality and more detail, but requires more network bandwidth.
Video Quality	Changes video quality. There are 5 levels of video quality from 'Lowest' to 'Highest'. Selecting a higher video quality will provide better video quality, but requires more network bandwidth.
Frame Rate	Changes video frame rate. Available options from '30' to '1', indicates how many video frames this camera will transmit every second. Higher frame rate provides smooth video watching experience and will not lose details of video, but requires more network bandwidth. If you're using this video camera with insufficient network bandwidth, selecting a lower frame rate setting will help.

Click **Apply** for settings to take effect.

3.4.3. H.264

You can adjust video settings when you select '**H.264**' as video type in '**Camera**' menu.

H.264
✔ Video Resolution : 640 x 480
✔ Video Quality : Highest
✔ Frame Rate : 15

The descriptions of every setting in this menu will be given below:

Video Resolution	Changes the resolution of video. Available options are 1280 x 1024, 640 x 480, and 320 x 240. Higher resolution provides better video quality and more detail, but requires more network bandwidth.
Video Quality	Changes video quality. There are 5 levels of video quality from 'Lowest' to 'Highest'. Selecting a higher video quality will provide better video quality, but requires more network bandwidth.
Frame Rate	Changes video frame rate. Available options from '30' to '1', indicates how many video frames this camera will transmit every second. Higher frame rate provides smooth video watching experience and will not lose details of video, but requires more network bandwidth. If you're using this video camera with insufficient network bandwidth, selecting a lower frame rate setting will help.

Click **Apply** for settings to take effect.

3.4.4. OSD

If you need to display information about this camera, like camera's name or current date / time, you can use OSD (On-Screen Display) menu:




The descriptions of every setting in this menu will be given below:

On-Screen Display	Select 'Enable' to enable on-screen display function (information about this camera will be displayed on camera's display image), and select 'Disable' to disable it.
Show Camera Name	Select 'Enable' to show camera's name on camera's display image, select 'Disable' to hide it.
Show Date	Select 'Enable' to show current date on camera's display image, select 'Disable' to hide it.
Show Time	Select 'Enable' to show current time on camera's display image, select 'Disable' to hide it.

Click **Apply** for settings to take effect.

When OSD is enabled, selected OSD items will be displayed like this:

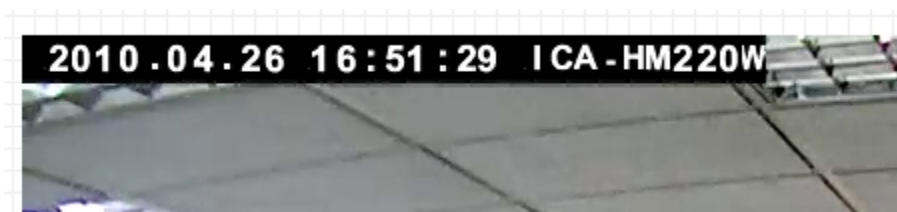

3.4.5. Night Vision

This camera equips with 9 IR LEDs to enhance video quality in the night. You can enable or disable IR LEDs by 'Night Vision' menu:

IR Control
☐ Always turn off IR led
☐ Always turn on IR led
☒ Auto mode
☐ Turn on/off IR led by schedule

☒ Turn on IR led from : : 24-hour (hh : mm)
☒ Turn off IR led from : : 24-hour (hh : mm)

The descriptions of every setting in this menu will be given below:

Always turn off IR led	Do not use IR LEDs, even it's very dark.
Always turn on IR led	Turn IR LEDs on, even it's very bright.
Auto mode	Let camera decide to switch LED lights on or off automatically: LEDs will light up when it's too dark. If you don't know which option you should select in this page, select this one.
Turn on/off IR led by schedule	Switch IR LEDs on or off by schedule. You have to input start time in 'Turn on IR led from' section, and end time in 'Turn off IR led from' section.

Click **Apply** for settings to take effect.

3.5 Pan and Tilt Settings


This IP camera supports pan and tilt function, as you explored in last section. You can also make the camera move automatically in pan and tilt menu by defining a set of pre-defined path.

You can access this menu by clicking PTZ on the top of web management interface.



3.5.1. Preset Points

You can define the camera position and save the position so you can recall the position later again. This camera provides 9 memory slots; follow the following instructions to move the camera and set a new preset point:

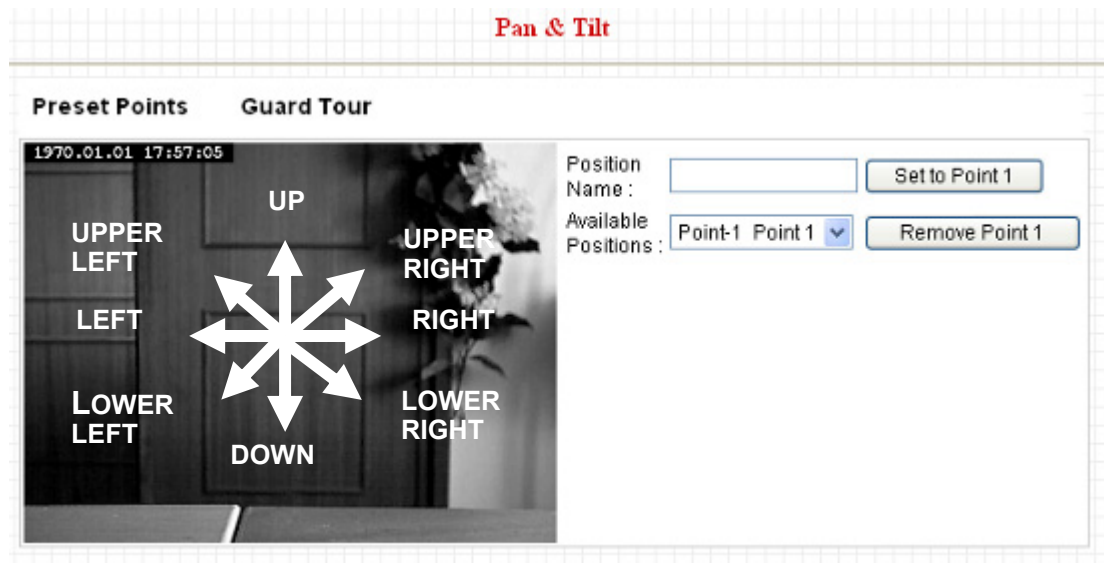

1. Select a memory slot from **Available Positions** dropdown menu first.
2. To move the camera, click the position of labeled text (not shown on image) on the image to move the camera to the direction. You may need to set the Pan / Tilt speed to a slower setting, so you can move the camera in a more accurate manner.
3. When you move the camera to the position you want, type a name in **Position name** field, and click **Set to Point n** (where 'n' is the number of memory slot) button to save the position to selected memory slot.

After you set the position, you can recall the position from **Camera** menu (click the position number button), and the camera will move to preset position instantly.

If you want to remove a preset position, select the memory slot from **Available Positions** dropdown menu, and then click **Remove Point n**, (where 'n' is the number of memory slot you wish to clear position setting).

3.5.2. Grand Tour

You can make the camera move between many pre-defined positions, and define the time you wish to pause at every position; this is called as 'Grand Tour'.

Name	Running	Mode
Guard	no	sequential

Guard Tour List:

Add Edit Start / Stop Remove

Before you can use this function, you have to define at least 2 positions in **Preset Points** section (refer to last section for detailed information).

The descriptions of every setting in this menu will be given below:

Add	Add a new set of grand tour (see instructions below)
Edit	Edit a selected grand tour. The parameters for an existing grand tour will be recalled and you can modify them.
Start / Stop	Select a grand tour and click this button to start grand tour, click again to stop it. After a grand tour has been started, go to Camera menu to see it in action. Only one grand tour can be activated at the same time.
Remove	Remove a grand tour from the list.

If you wish to add a new set of grand tour, click **Add** to start to add a new grand tour set:

http://192.168.98.215/setup_guard_tour.asp?add=add - Microsoft Internet Explorer

Setup Guard Tour

✓ Name : Guard Tour Name ☐ View With Random Order

✓ Available Positions : Point-1 Point 1

Position View Time View Order Remove

Done Internet

The descriptions of every setting in this menu will be given below:

Name Input the name of this set of grand tour here. As you may have many sets of grand tour, please give it a meaningful name so you can remember the main purpose of this set.

View with random order Do not visit all positions in this grand tour by order; visit them randomly instead.

Available positions Select preset points from dropdown menu here, then click **Add to list** to add this position to this grand tour.

When you click **Add to list**, you'll be prompted to set these parameters:

The screenshot shows a web browser window titled "http://192.168.98.215/setup_guard_tour.asp?edit=Guard Tour Name - Microsoft Internet E...". The page content is titled "Setup Guard Tour". It features a form with the following elements:

- A green checkmark icon followed by the label "Name :".
- A text input field containing "Guard Tour Name".
- A checkbox labeled "View With Random Order".
- A green checkmark icon followed by the label "Available Positions :".
- A dropdown menu showing "Point-1 Point 1".
- An "Add to list" button.
- A table with the following structure:

Position	View Time	View Order	Remove
Point 1	10 second(s)	1	Remove

At the bottom right of the table area, there are "Save" and "Close" buttons.

View Time:

Define the time you wish the camera to stop at this position in seconds.

View Order:

Give this position a number greater than 1 and not the same with other positions, and grand tour will start visiting positions by order (from 1 to last number, and then start from 1 again).

Remove:

Remove this position from list.

Save:

Save settings for this position.


Close

Close this window and discard all changes.

3.6 Network Settings

All network-related settings can be found in this menu, and you have to specify TCP/IP parameters in this menu if you want to change IP address, use PPPoE, Dynamic DNS, and activate UPnP function.

You can access this menu by clicking **LAN** on the top of web management interface.



After you selected 'Network', network setting menu will appear. There are 5 sub-menus available here:



Please click the network setting you wish to set, and then refer to instructions given below:

3.6.1. LAN

You can define IP address and select the port number you wish to use here.

LAN

✔ Network Type :

☐ DHCP ☒ Static IP Address

✔ IP Address :

✔ Subnet Mask :

✔ Gateway :

✔ Primary DNS :

✔ Secondary DNS :

✔ Web Port :

PPPoE

✔ Enable PPPoE :

☐ Enable ☒ Disable

✔ User Name :

✔ Password :

✔ MTU :

(512<=MTU Value<=1492)

Apply

The descriptions of every setting in this menu will be given below:

Network Type	This camera can obtain the IP address from DHCP server automatically (if you have one), or set a fixed IP address. Select DHCP to obtain IP address automatically or Static IP Address to assign this IP camera with a fixed IP address. When DHCP is selected, IP address parameters below will be grayed out.
IP Address	Specify the IP address for this IP camera here.
Subnet Mask	Specify the subnet mask for this IP camera here.
Gateway	Specify the gateway address of the local network here.
Primary DNS	Specify the IP address of DNS server here. Please input IP address only. If you don't know the address of DNS server, ask network administrator or your ISP for help.
Secondary DNS	Specify the IP address of backup DNS server here. When primary DNS is unreachable, IP camera will use the IP address specified as DNS server. The field is optional.
AV Control Port	Specify the port number of video transfer here. If you have firewall on your network, you need to allow computers on Internet to access this port number of the IP address of IP camera, or you'll not be able to view video from Internet.
Web Port	Specify the port number of web management interface here. If it's not 80, you'll have to add port after the IP address / hostname of this IP camera. For example: If the HTTP port number you specified here is 90 and the IP address of IP camera is 10.20.20.30, then you have to input 'http://10.20.20.30:90' in the address bar of Internet explorer.
Enable PPPoE	Select Enable to activate PPPoE function of this IP camera, select Disable to disable it.
User Name	Input the PPPoE username assigned by your ISP here.
Password	Input the PPPoE password assigned by your ISP here.
MTU	Input the MTU (Maximum Transmission Unit) given by your ISP here. Ask your ISP if you don't know what value you should input here. Default value should work with most of ISPs and will give you a nice network performance.

Click **Apply** to save settings and make the new settings take effect.

3.6.2. WLAN

Wireless LAN

✔ Wireless Connection :

☒ Enable ☐ Disable

✔ Network Type :

Infrastructure

✔ Available Networks :

Connect	SSID	MAC Address	Signal	Channel	Encryption	Network Type
<input type="radio"/>	PlanetAPrelay72	00:30:4F:7B:9F:53		5	Disabled	Infrastructure
<input type="radio"/>	Yang92mimo	00:30:4F:41:44:14		8	WPAPSK(TKIP)	Infrastructure
<input type="radio"/>	ADW-4401B	00:1E:E3:00:98:50		10	Disabled	Infrastructure
<input type="radio"/>	626v3	00:1E:E3:EF:98:E0		12	Disabled	Infrastructure

✔ SSID :

default

✔ Channel :

1

✔ Authentication :

Shared Key System

✔ Encryption Type :

WEP

✔ WPA Pre-Shared Key :

✔ WEP Key Length :

64-Bit

✔ WEP Key Format :

HEX

✔ Default Key :

3

✔ WEP Key 1 :

✔ WEP Key 2 :

✔ WEP Key 3 :

✔ WEP Key 4 :

WPS

✔ Self PinCode :

38446092

✔ Configure via Push Button :

✔ Configure via PinCode :

Registrar SSID :

The descriptions of every setting in this menu will be given below:

Wireless Connection

Select **Enable** to activate wireless network function of this IP camera, select **Disable** to disable it.

Network Type

Select the network type of wireless connection.

Available options are **Infrastructure** (Connect the IP camera to a wireless access point), and **Adhoc** (This IP camera will become a stand-alone wireless network point, other wireless computers / devices can discover this IP camera and connect to it without wireless access point).

You can set to **Adhoc** when you don't have any wireless access point, but your computer has wireless network card. Set to 'Infrastructure' when you have wireless access point, and you have computers with wired network connection.

Available Networks

Here shows all wireless access points found by this IP camera. Please note not all access points will be displayed at the same time, if the access point you expected to connect does not appear, you may have to click **Refresh** button for several times until it appears. The descriptions of all fields is listed below:

Connect: You can select the wireless access point you wish to connect here.

SSID:

The SSID of all found wireless access points will be shown here. Some wireless access point may hide their SSID; in this case, you have to identify them by their MAC address.

MAC Address:

If you there are many wireless access points in proximity or some wireless access point hides it's SSID, you can use MAC address to distinguish them.

Signal: Shows the radio signal strength in percent.

Channel: Shows the radio channel of this wireless access point.

Encryption:

Shows the encryption type used by this wireless access point. You must use the same encryption type if you wish to connect to a certain wireless access point. If the wireless access point does not use encryption, **Disabled** will be displayed here.

Network Type:

Shows the network type of a certain wireless access point (Infrastructure or Adhoc).

SSID Input the SSID of the wireless access point you wish to connect. It should be less than 32 alphanumeric characters.

When you select a wireless access point above, it's SSID will be filled in this field automatically. However, if the SSID is not displayed (the wireless access point you selected choose to hide it's SSID), you have to know it's SSID and input it here, or you will not be able to connect it.

Channel Select the radio channel you wish to use here. When network type is Infrastructure, the radio channel is auto-selected according to the channel that wireless access point uses. You can only select the channel number when network type is **Adhoc**.

Wireless Key Input the encryption key of selected wireless access point here. This is required when access point you wish to connect uses encryption.

Self PinCode Here displays the WPS pin code used to connect to WPS-enabled wireless access points. You have to input this number into the WPS enabled access point to establish WPS connection.

Configure via Push Button Click this button and this camera will enter PBC-style WPS connection state for 120 seconds. Please push 'Start PBC' button on the wireless access point you wish to connect within 120 seconds to establish WPS connection (The remaining time will be displayed on the button).

If connection can not be established after 120 seconds, you'll be prompted by a message box, and you can press 'Start PBC' button to try again.

Configure via PinCode If you have wireless access point's WPS PIN code, you can input it here and press **Start PIN** button to start to establish PIN-style WPS connection.

3.6.3. Dynamic DNS

If your ISP does not give you a fixed Internet IP address (i.e. the Internet address you're using when you access the Internet is not always the same – ask your ISP for detailed information), you can use this function to help you locate the IP address of this IP camera when you're away from home or office.

Before you can use this function, you'll need to apply for an account at dyndns.org (<http://www.dyndns.org>). Detailed instructions of how to apply a new account can be found on dyndns.org's website.



The descriptions of every setting in this menu will be given below:

Enable DDNS	Select Enable to activate Dynamic DNS function of this IP camera, select Disable to disable it.
Provider	Select dynamic DNS service provider here. Only dyndns.org is available currently.
Host Name	Input dynamic DNS host name here.
User Name	Input dynamic DNS user name here, must be the same as the one you applied on dyndns.org.
Password	Input dynamic DNS password here, must be the same as the one you applied on dyndns.org.

Click **Apply** to save settings and make the new settings take effect.

3.6.4. UPnP

When UPnP function is activated, all UPnP-compatible computers / network devices will be able to discover this IP camera automatically (only those in the same local network). This function is useful and you don't have to remember the IP address of this IP camera. Simply open 'Network neighbor' and it's there!




The descriptions of every setting in this menu will be given below:


Enable UPnP	Select Enable to activate UPnP function of this IP camera, select Disable to disable it.
--------------------	--

Click **Apply** to save settings and make the new settings take effect.

After UPnP function is activated, a popup message will appear:

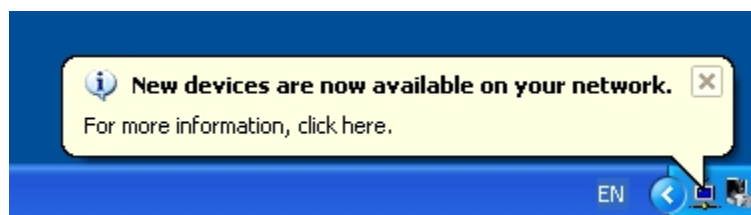

Click the message to open **My Network Places**, and you'll see the IP camera:

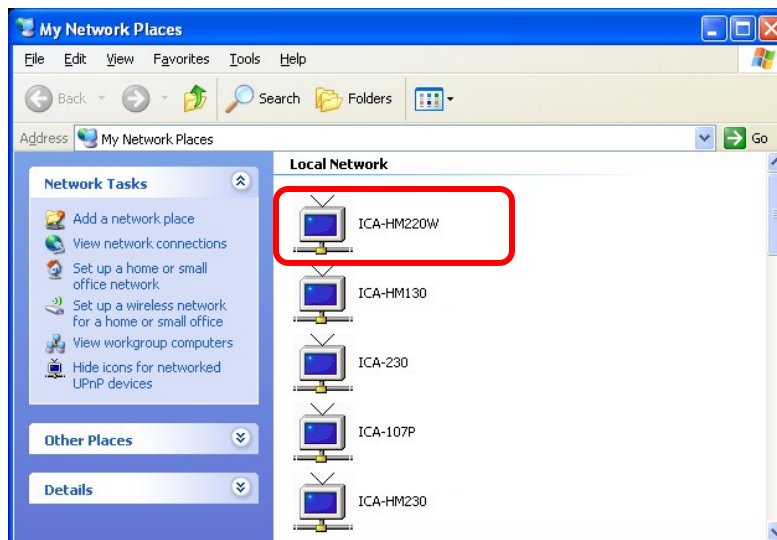

You can double-click the icon to launch Internet Explorer and log onto IP camera's web management interface directly.

3.6.5. LoginFree


This camera provides a method to let unauthorized users to view the image captured by this camera, which is called as **LoginFree**. When you wish to let everyone to view the image captured by this camera, or integrate the image with your own web application, you can use this function:

LoginFree
♥ Filename : .jpg

Input the filename here, and click **Apply** to save settings, then other users can access the image by this filename with .jpg extension with the camera's IP address as prefix. For example, if your camera's IP address is '192.168.0.20' and the filename you set here is **picture**, then everyone on the web can access the image captured by this camera by using the following address:

<http://192.168.0.20/picture.jpg>

Please note that no authentication will be required to see the captured image. If you wish to disable this function, clear the text in **Filename** field and click **Apply**.

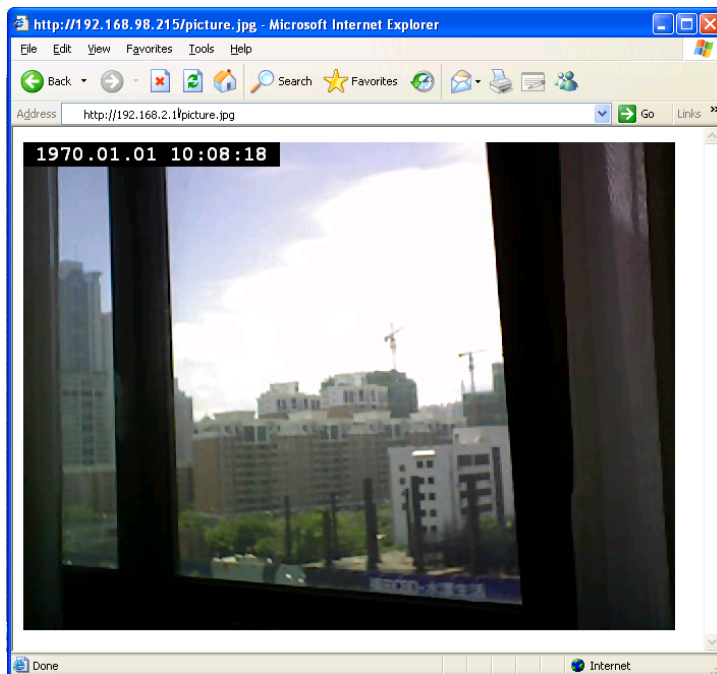

3.6.6. RTSP

If you want to watch video captured by this IP camera by your own RTSP (Real Time Streaming Protocol) media player, you can use this function to setup RTSP parameters, so your RTSP-compatible player will be able to receive video data.

Video Streaming

✔ RTSP Port :

✔ MPEG4 RTSP Path :

.sdp

✔ H264 RTSP Path :

.sdp

✔ RTP Port Range :


-

RTSP Port	Input the port number of RTSP here. Default setting is 554.
MPEG4 RTSP Path	Input the path of MPEG4 RTSP video file. When you use RTSP-compatible media player to play RTSP stream, please remember to add '.sdp' file extension.
H.264 RTSP Path	Input the path of H.264 RTSP video file. When you use RTSP-compatible media player to play RTSP stream, please remember to add '.sdp' file extension.

3.7 Motion Detection Setting

When you wish to use this camera to monitor the activities, motion detection function will be very useful. Camera will detect the motion in captured image, and take a snapshot when motion is detected. So you can use this camera to keep the safety of the belongings you have.

To use motion detection, click the following link from the top of menu:



After you selected **Motion Detection**, a sub-menu will appear. There are 5 sub-menus available here:



Detailed descriptions of every setting will be given below.

3.7.1. Motion Detection

You can use this menu to setup basic motion detection settings:

Motion Detection

- Enable Motion Detection : ☒ Enable ☐ Disable
- Motion Detection Interval : 5 seconds
- Recording Time : 3
- Sending File Type : JPEG
- Send snapshot file to FTP : ☐ Enable ☒ Disable
- Send snapshot file to E-Mail : ☐ Enable ☒ Disable

SD Card

- SD Card Record : ☐ Enable ☒ Disable
- Storage File Type : JPEG
- Record File Size : 10 MBytes (Max 100 MB)

Samba Network

- Record to Folder : ☐ Enable ☒ Disable
- Authentication : Anonymous
- User Name :
- Password :
- Samba Server : 192.168.3.61
- Shared Folder : share
- Storage File Type : JPEG
- Record File Size : 10 MBytes (Max 100 MB)

Apply Samba Test

The descriptions of every setting in this menu will be given below:


Enable Motion Detection	Select “ Enable ” to enable motion detection, and select Disable to disable this function.
Motion Detection Interval	Select the time interval between two motions from dropdown menu. When a motion is detected, camera will not detect any motion again within the time interval you specified here. Available options are from 0 second (always detect new motion) to 60 seconds.
Recording Time	Select the duration you wish this camera to record image when a motion is detected from dropdown menu. Available options are 1, 2, 3, 4, and 5 (seconds).
Sending File Type	Select the file type that will be saved when a motion is detected. Select “ JPEG ” and a still picture in JPEG format will be saved; and select AVI to save a motion video clip.
Send snapshot file to FTP	Select “ Enable ” to send the saved file to appointed FTP server when a motion is detected, select ‘Disable’ to disable this function. You have to configure FTP server parameters in FTP Configuration menu first, so this function will take effect (see below).
Send snapshot file to E-Mail	Select “ Enable ” to send the saved file to appointed E-mail address when a motion is detected, select Disable to disable this function. You have to configure mail server parameters in ‘FTP Configuration’ menu first, so this function will take effect (see below).
Send snapshot file to SD Card	Select “ Enable ” to send the saved file to SD card when a motion is detected, select Disable to disable this function. You have to insert a working SD card into the SD slot of this camera first, so this function will take effect.
Storage File Type	Select saving file type for motion detection: JPEG (still picture) or AVI MPEG4 / AVI H264 (for motion picture).
Record File Size	Input the maximum file size of saved file in Mbytes. Maximum file size is 100.
Record to Folder	Select “Enable” to save file to a network folder which supports SAMBA (also known as ‘Windows Network Neighborhood’), select ‘Disable’ to disable this function.
Authentication	If username and password are not required to write files in specified folder, select ‘Anonymous’; if required, select ‘Account’.
User Name	Input user name required by destination network folder.
Password	Input password of the user name required by destination network folder.

Samba Server	Input the IP address or host name of network file server.
Shared Folder	Input the folder name on file server.
Storage File Type	Select saving file type for motion detection: JPEG (still picture) or AVI MPEG4 / AVI H264 (for motion picture).
Record File Size	Input the maximum file size of saved file in Mbytes. Maximum file size is 100.

Click **Apply** to save settings and make the new settings take effect.

3.7.2. Motion Region

You can define the motion detection region within the image that camera captures, so this camera will ignore motions which are not covered by the motion region setting, and reduce the chances of false alarm.

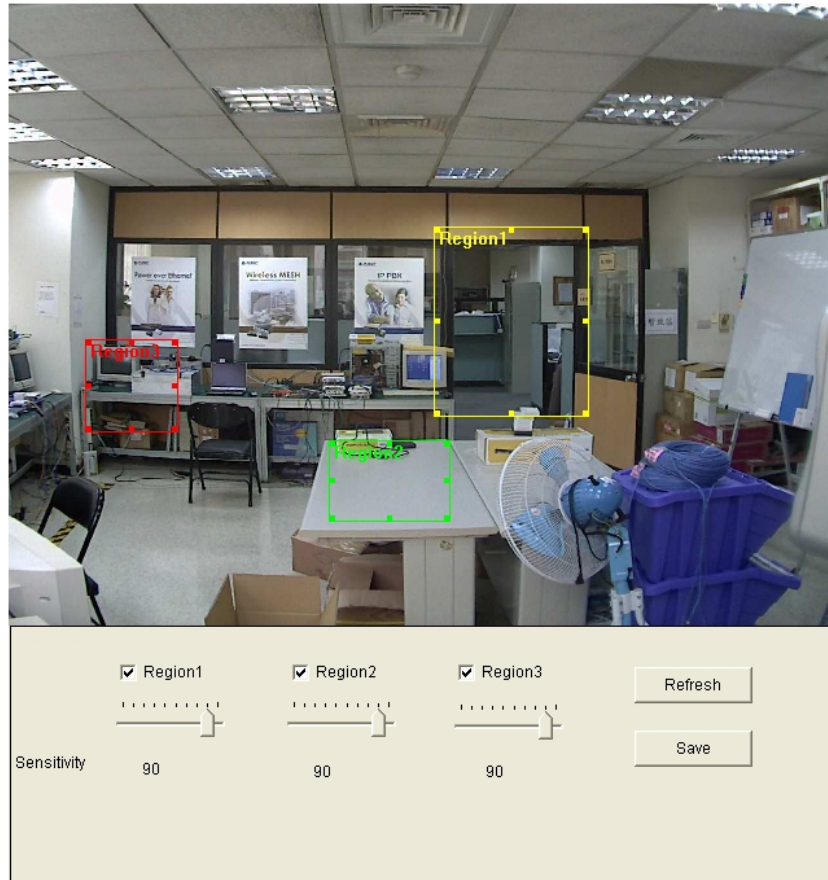

The descriptions of every setting in this menu will be given below:

Region 1 – 3

Check the box to enable motion detection region 1 to 3. You can check multiple boxes to enable multiple motion detection regions. When you checked a box, a new region (and region number) will be displayed on captured image.

Sensitivity

Move the slide bar to change the motion detection sensitivity setting: Drag the slide to the right to increase sensitivity (camera will detect minor changes in the image), and drag the slide to the left to decrease sensitivity (camera will only detect major changes in the image).

Refresh

In case the objects of the image captured by the camera moved, click this button to reload the image captured by camera, so you can decide the motion detection region more precisely.

Save

Save motion detection region settings.

To change the motion detection region, you can **resize** and **reposition** it:



Move the mouse cursor to the eight dots located at the border of motion detection region, and the mouse cursor will switch to \leftrightarrow , \nwarrow or \updownarrow . You can click and hold mouse button and move the mouse to resize the motion detection region.

To move reposition the motion detection region, move the mouse within the motion detection region, and the mouse cursor will switch to $\leftarrow \oplus \rightarrow$. Click and hold mouse button and move the mouse to reposition the motion detection region.

3.7.3. Email

You can define the destination address of E-mail sending and mail server parameters here.

E-Mail

✔ Recipient E-Mail Address :

✔ E-Mail Subject :

✔ SMTP Server :

✔ Sender E-Mail Address :

✔ SMTP Authentication : ☐ Enable ☒ Disable

✔ User Name :

✔ Password :

The descriptions of every setting in this menu will be given below:

Recipient E-Mail Address	Input the email recipient's Email address here.
E-Mail Subject	Specify the title of sending email, so you can identify the mail sent from this camera from others quickly.
SMTP Server	<p>Input the IP address or host name of the SMTP server (the server that delivers the Email for you) here.</p> <p>If you don't know, please refer to the SMTP server you're using in your Email software (like Outlook, Outlook Express etc.), or ask your network administrator or ISP.</p>
Sender E-Mail Address	<p>Input the Email address of mail sender, this will help you to identify the Email sent by this IP camera by sender's Email address.</p> <p>NOTE: <i>Some mail server would reject to deliver the Email from unknown sender, it's recommended to input your own Email address here, or any other actual one.</i></p>
SMTP Authentication	Some SMTP server requires mail senders to be authenticated before they can send Email. If your SMTP server requires you to do so, please select Enable , or select Disable to disable it. If you don't know, please refer to the SMTP server you're using in your Email software (like Outlook, Outlook Express etc.), or ask your network administrator or ISP.
User Name	Please input the user name of SMTP server here, if your SMTP server requires the use of authentication.
Password	Please input the password of SMTP server here, if your SMTP server requires the use of authentication.


Recipient E-Mail Address Input the email recipient's Email address here.

Click **Apply** to save settings and make the new settings take effect.

After that, you can click **Send a test email** to send a testing Email to the address you set here, so you can make sure the setting you specified here is correct and working.

3.7.4. FTP Configuration

You can set FTP server's parameters here.

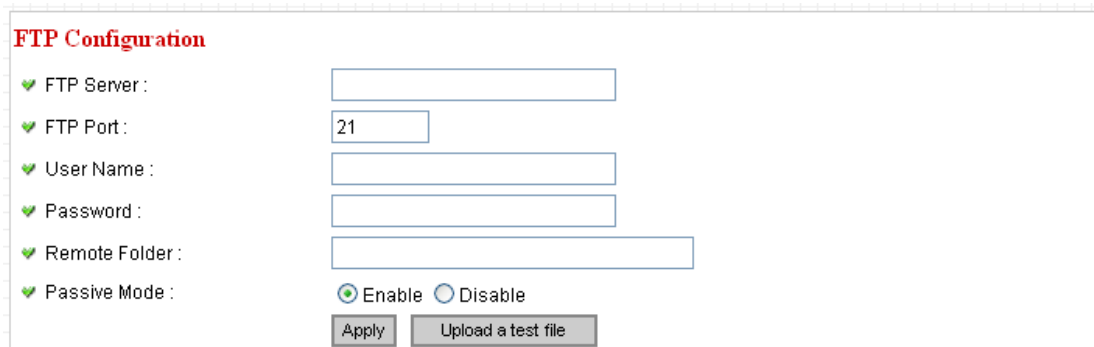

FTP Configuration

✔ FTP Server :

✔ FTP Port :

✔ User Name :

✔ Password :

✔ Remote Folder :

✔ Passive Mode : ☒ Enable ☐ Disable

The descriptions of every setting in this menu will be given below:

FTP Server	Input the IP address or host name of the FTP server you wish to use here.
FTP Port	Input the port number of the FTP server you wish to use here.
User Name	Input the user name of the FTP server you wish to use here.
Password	Input the password of the FTP server you wish to use here.
Remote Folder	<p>Input the remote folder name on the FTP server here. If nothing is specified here, all uploaded image files will be placed in FTP server's root directory.</p> <p>Please ask FTP server's administrator to know which folder you should use. Certain user name may have restrictions and therefore can not place the file in the directory not owned by the user.</p>
Passive Mode	<p>Select Enable to use passive mode to send file, or select Disable to not to use passive mode to send file.</p> <p>Some FTP servers require passive mode, if you don't know, please ask FTP server's administrator; most of FTP servers will work fine with both modes, but if you found that non-passive mode is not working, you can try to use passive mode.</p>

Click **Apply** to save settings and make the new settings take effect.

After that, you can click **Upload a test file** to send a file to the FTP server you set here, so you can make sure the setting you specified here is correct and working.

3.7.5. SD Card Configuration

You can define the filename and destination folder when saving a file in SD card.



SD Card Configuration

✔ File Name Prefix :

✔ Destination Folder :

The descriptions of every setting in this menu will be given below:

File Name Prefix	Specify the filename prefix (the texts which will be added before the file sequence number).
Destination Folder	Specify the folder name that camera will store the saved image or video clip.


Click **Apply** to save settings and make the new settings take effect.

3.8 System Info

You can use this menu to get the operational information of this camera:



After you selected **System Info**, a sub-menu will appear. There are 4 sub-menus available here:



Detailed descriptions of every setting will be given below.

3.8.1. Camera Information

Camera information allows you to set the name and administrator's password of this camera.

A screenshot of the 'Camera Information' settings page. It has a title 'Camera Information' in red. Below the title are three labels with green checkmarks: 'Camera Name', 'Password', and 'Confirm Password'. Each label is followed by a text input field. The 'Camera Name' field contains the text 'ICA-HM220W'. The 'Password' and 'Confirm Password' fields contain six dots. Below the input fields is an 'Apply' button.

The descriptions of every setting in this menu will be given below:

Camera Name	Please specify the name of this IP camera here. This can be used to identify your camera on the network when you have more than one IP camera in the same network. Default name begins with ICA-HM220W . You can modify the name to the one you can remember and meaningful to you, but never give all IP cameras in the same network with same name.
Password	Please specify user name admin's password here. (The one you need when you log onto web management interface and use 'admin' as user name.
Confirm Password	Please input the same password again, to make sure there's no typo.

Click **Apply** to save settings and make the new settings take effect.

3.8.2. Date / Time Setting

This setting allows you to change the date and time of the real time clock in this IP camera. You can set the time manually, or use network time protocol (NTP) to set the time automatically.

Date / Time Setting

☒ Set Date/Time manually / / : :

☐ NTP Server

✓ Time Zone : (GMT+08:00) Taipei ▼

✓ NTP Server : pool.ntp.org

The descriptions of every setting in this menu will be given below:


Set Date/Time manually / NTP Server	<p>If you select Set Date/Time manually, you can set the date and time of this camera manually. Please input the date and time you wish to set here.</p> <p>Date / time format is YYYY / MM / DD HH:MM:SS</p> <p>Time is in 24-hour format.</p> <p>You can click Synchronize to PC time to use the time of the computer you're using.</p> <p>Example: 24th August 2007 = 2007/ 08 / 24, and PM 9:24:30 = 21:24:30</p> <p>If you select 'NTP Server', the camera will get the date and time from NTP Server automatically.</p>
Time Zone	<p>Please select the time zone of the country / city of resident from dropdown menu here.</p>
NTP Server	<p>Please input the IP address or host name of NTP server here. You can use default value pool.ntp.org, or ask your ISP for the IP address or host name, if they have one.</p>

Click **Apply** to save settings and make the new settings take effect.

If you wish to use the date and time setting of the computer which is connecting to the camera, click **Synchronize to PC time** button. The date and time setting of the computer will be filled to date and time setting in this page.

3.8.3. Utilities

This menu allows you to upgrade firmware, clear all settings, reboot the IP camera, and switch LED lights on/off.

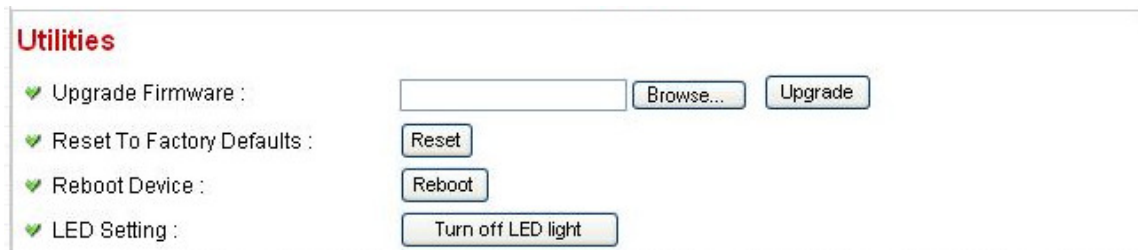

The descriptions of every setting in this menu will be given below:

Upgrade Firmware	<p>If you downloaded latest firmware file from our website, you can click Browse button to pick a firmware file located on your computer's hard drive and you can upload the firmware file to the IP camera later.</p> <p>After you selected a proper firmware file from your computer, click Upgrade Firmware button to start upgrade.</p> <p>DO NOT DISCONNECT NOW!</p> <p>If the firmware file you provided is invalid or you didn't provide the firmware file, you'll be prompted to select another valid firmware file again.</p> <p>The IP camera will reboot after the upgrade procedure is done.</p> <p>PLEASE NOTE THAT THE IP ADDRESS OF THE CAMERA WILL RESET TO DEFAULT VALUE: 192.168.0.20</p>
Reset to Factory Defaults	<p>Clear all settings in the camera. Please think again before you do this, and then click this button to reset all settings.</p> <p>NOTE:</p> <p><i>IP address will be reset to default value '192.168.0.20' also. You'll need to change the IP address setting of your computer if the IP address of your computer does not begin with '192.168.0', and subnet mask is not '255.255.255.0', or you'll not be able to connect to this IP camera again.</i></p>
Reboot Device	<p>If you found the IP camera is responding slowly or behaves strange, you can click this button to try to reboot the IP camera, this may help.</p>
LED Setting	<p>Click Turn off LED light button to switch the LED light of this IP camera off, so all LEDs on the IP camera will stop working, in case you don't want other people know the camera is transferring data.</p> <p>You can click this button again to switch LED lights on again.</p> <p>Click Apply to save settings and make the new settings take effect.</p>

3.8.4. Status

This menu provides all information about this IP camera, like firmware version, system uptime, date / time, and network information.

System	
✔ Firmware Version :	v1.0 (Jun 2 2008 14:29:12)
✔ Device Uptime :	11 hours 25 min 58 sec
✔ System Time :	1970/01/01 19:25:58
LAN	
✔ IP Address :	192.168.98.215
✔ Subnet Mask :	255.255.255.0
✔ Gateway :	192.168.98.254
✔ DNS Server :	192.168.98.254
✔ MAC Address :	00:11:09:30:10:C4
✔ Video Port :	4322
✔ HTTP Port :	80
PPPoE	
✔ Link Status :	Disconnected
✔ IP Address :	
✔ Subnet Mask :	
✔ Gateway :	
✔ DNS Server:	

3.9 Account Settings

If you wish to allow other people to view the live image captured by this camera, but don't want to allow them to modify system settings, you can give them user-level user name and password, so they can only view the image and can not change any system setting. When they want to click menus other than Camera, they will see the following message informing that they don't have permission to do that:



After you selected **Account**, you'll be prompted to input user account information:

A screenshot of a web form titled 'Account' in red text. The form is set against a light gray grid background. It includes a 'User List' section with a text box containing 'user1 : operator'. Below this are four labeled input fields: 'Login', 'Password', 'Confirm password', and 'Authority'. The 'Authority' field has two radio button options: 'Operator' (which is selected) and 'Guest'. At the bottom right of the form are three buttons: 'Add', 'Modify', and 'Remove'.

The descriptions of every setting in this menu will be given below:

Login	Input the login name (user name) of this account.
Password	Input the password of this user here.
Confirm password	Input the password of this user here again for confirmation.
Add	Click this button to add the account.

When a user is added, it will be listed:

The descriptions of every setting in this menu will be given below:

User List	Lists all users currently available.
Login	Input the login name (user name) of this account.
Password	Input the password of this user here.

Confirm password	Input the password of this user here again for confirmation.
Authority	Select the privilege of this user: Operator (able to change system settings) or Guest (View images only).
Add	Click this button to add the account.
Modify	Modify an existing user's information. You have to select a user from user list first.
Remove	Remove an existing user. You have to select a user from user list first.


Click **Apply** to save settings and make the new settings take effect.

Note

Only one user (including administrator) will be able to view the image of IP camera at the same time.

3.10 SDHC

In this menu, you can perform SD-HC card related operations.




After you selected **System Info.** a sub-menu will appear. There are 4 sub-menus available here:



Please click the SD card setting you wish to set, then refer to instructions given below:

3.10.1. Status

Here shows the remaining card space for you.

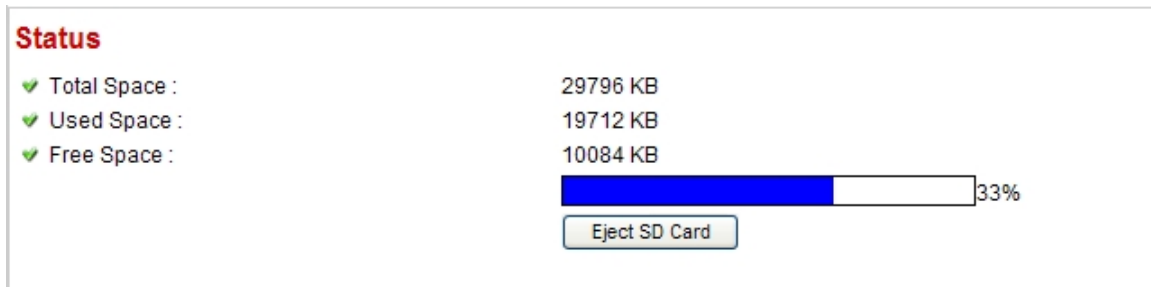

3.10.2. Space Alarm

When you're using SD card to store captured image and video clip, you can have this camera to send an E-mail to you when there's only little remaining space left on SD card.

E-Mail

✔ Recipient E-Mail Address :

✔ E-Mail Subject :

Motion Detection Notification

✔ SMTP Server :

✔ Sender E-Mail Address :

✔ SMTP Authentication :

☐ Enable ☒ Disable

✔ User Name :

✔ Password :

Apply

Send a test email

The descriptions of every setting in this menu will be given below:

Recipient E-Mail Address	Input the E-mail address you wish to receive space alarm.
E-Mail Subject	Input the title of space alarm E-mail.
SMTP Server	Input the SMTP server address you wish to use to send E-mail.
Sender E-Mail Address	Input the sender E-mail address of the space alarm E-mail.
SMTP Authentication	Select Enable if the SMTP server you're using requires authentication, and input the username and password below; If the SMTP server you're using does not require authentication, select 'Disable' here. If you're not sure, ask your ISP or network administrator.
User Name	Please input the user name of SMTP server here, if your SMTP server requires the use of authentication.
Password	Please input the password of SMTP server here, if your SMTP server requires the use of authentication.

Click **Apply** to save settings and make the new settings take effect.

User can click **Send a test email** button to send a test E-Mail by the configuration you set here.

3.10.3. File Management

You can use this menu to manage the files stored on SD card.




FirstPage	Jump to first page of file list.
PrevPage	Jump to previous page of file list.
NextPage	Jump to next page of file list.
LastPage	Jump to last page of file list.
SelectAll	Select all files in this page.
ClearAll	Clear all files in this page.
Delete	Delete selected files.

Appendix A: Reset Factory Default Settings

There is a button hidden in the pinhole near to the antenna base connector. This button is used to restore the all factory default settings. Sometimes restarting the device will make the system back to a normal state. However, if the system still got problems after restart, user can restore the factory default settings and install it again.

Restore the device:

1. Insert the paper clip or other suitable tool to press and hold the button down continuously.
2. Hold it over 8 seconds and release the tool. Then the device has been restored to default settings and reboot again.

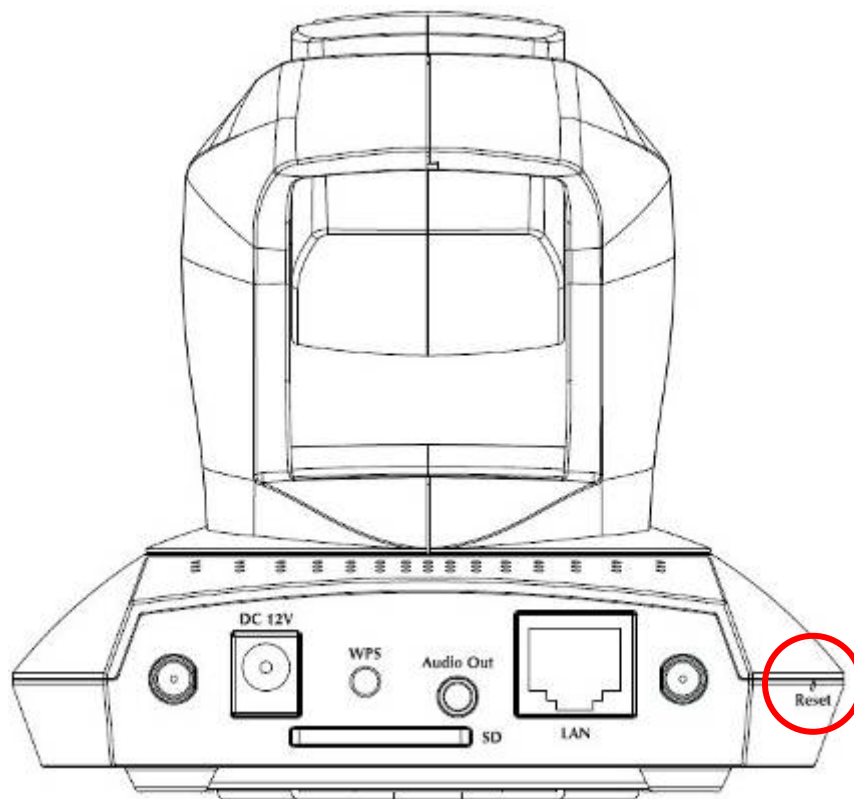

Note

Restoring the factory default setting will lose the all previous settings included IP address forever. User needs to runt the Admin software to search the device and configure it to let the device work properly again.

Appendix B: iPhone Viewer Mobile Access

To use the iPhone Viewer function, you might need more information or configuration to make this function work.

Note *That to use the iPhone Viewer function, it strongly recommends to install the Networked Device with a public and fixed IP address without any firewall protection.*

Dialing procedure:


1. Go to the iPhone's Safari mobile browser.
2. Use the following URL to access:

<http://host/ipcam.asp>

e.g. <http://192.168.0.20/ipcam.asp>

Where **host** is the host name or IP address of the IP camera.

3. After logged on, you should see the following panel on the screen.

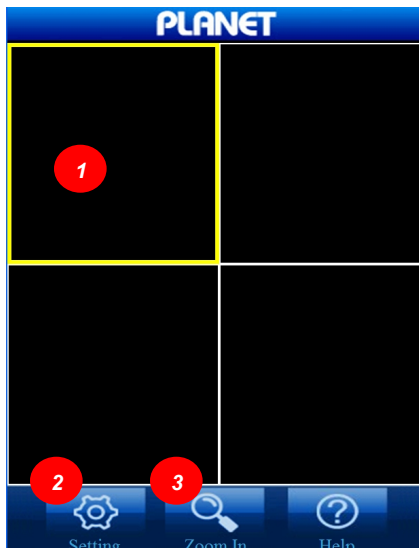


- | | |
|-------------------|---|
| 1. View Screen | The image shot by the camera is shown here. |
| 2. Camera Setting | Click this button to display the IP camera extra control panel. |
| 3. P/T Control | Click this button to display the P/T control panel. |

Add channel:

1. Click **Setting** and then **Camera Setting** buttons to get into **Camera Setting** page.




2. This will add as a new channel on iPhone Viewer for viewing. You will be prompted to input the following:
 - **Camera Name:** The IP camera's name that you would like to create. Example: "Bedroom"
 - **IP Address:** The camera's IP address.
 - **Port:** The http port of the IP camera (Default is "80").
 - **User Name:** The administrative account that the IP camera uses (Default is "admin")
 - **Password:** The administrative password that the IP camera uses (Default is "password")
3. Click **Add** to insert the IP camera in the viewer. In the meantime, you can click **Preview** first to check it out for proper streaming and connection.

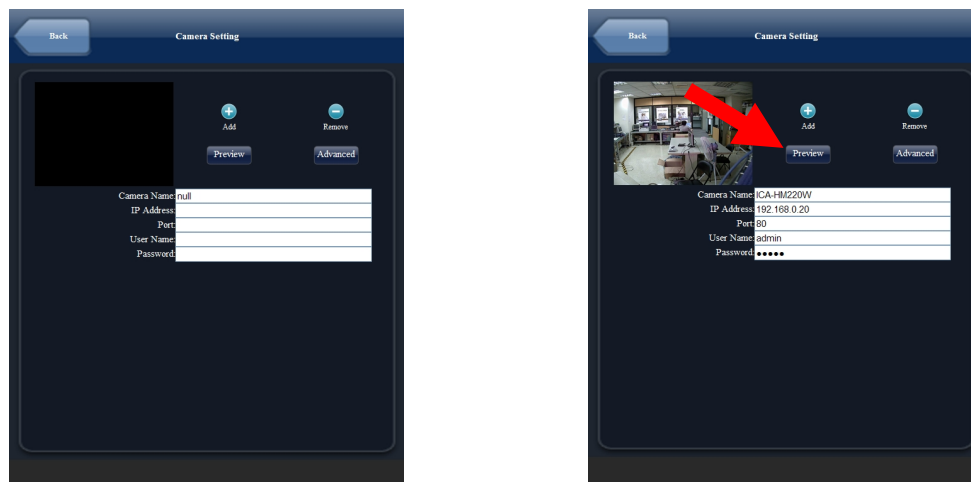



Camera Advanced Setting:

You can click on the “**Advanced**” button into the advanced page of IP camera, and this allow user to change the stream frame rate, resolution and compression level.

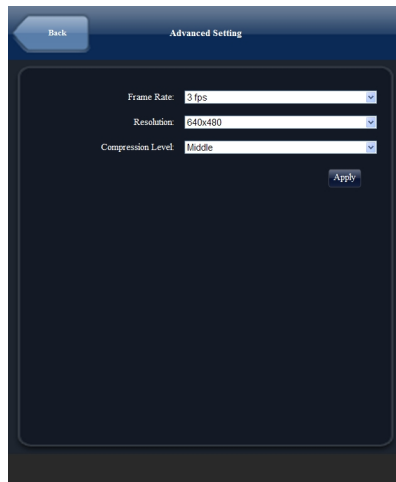

Viewer Setting:

The device could provide multiple languages to meet customer's requirement, user can manual change the viewer language.

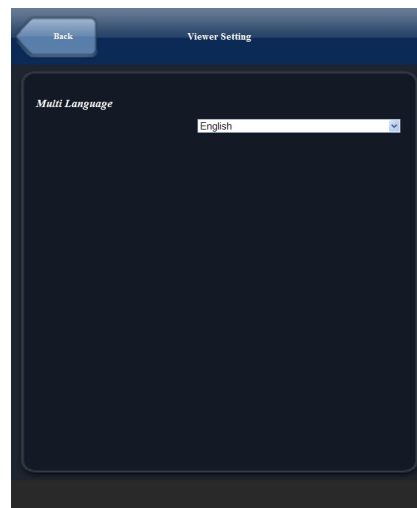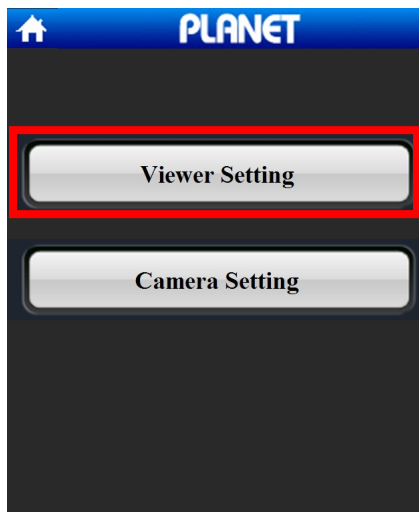

Note *Besides IP camera and mobile phone. You will also need to make sure the ISP and telephone company has provided the 3GPP service to you.*

Appendix C: PING IP Address

The PING (stands for Packet Internet Groper) command is used to detect whether a specific IP address is accessible by sending a packet to the specific address and waiting for a reply. It's also a very useful tool to confirm IP camera installed or if the IP address conflicts with any other devices over the network.

If you want to make sure the IP address of IP camera, utilize the PING command as follows:

- Start a DOS window.
- Type ping x.x.x.x, where x.x.x.x is the IP address of the IP camera.

The replies, as illustrated below, will provide an explanation to the problem.



```
Command Prompt
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

D:\Documents and Settings\Administrator>PING 192.168.0.20

Pinging 192.168.0.20 with 32 bytes of data:

Reply from 192.168.0.20: bytes=32 time=1ms TTL=64
Reply from 192.168.0.20: bytes=32 time<1ms TTL=64
Reply from 192.168.0.20: bytes=32 time<1ms TTL=64
Reply from 192.168.0.20: bytes=32 time<1ms TTL=64

Ping statistics for 192.168.0.20:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 1ms, Average = 0ms

D:\Documents and Settings\Administrator>_
```

If you want to detect any other devices conflicts with the IP address of IP camera, also can utilize the PING command but you must disconnect the IP camera from the network first.

Appendix D: DDNS Application

1. Preface

If you have a Cable modem or xDSL, this is a great way to host your own Networked Device or other TCP/IP Service. Get your own domain like www.yourname.com, www.yourname.com.tw etc. (Note: This domain must be registered with Internic via registration authorities such as Network Solutions, DirectNIC, Register.com etc). Your domain name's dynamic IP address is automatically tracked by a DDNS server.

Host your own Networked Device and much more no matter what your computer's IP address may be and even if you have dialup, DSL or cable modem internet connection where your computer's IP address changes all the time!! DDNS service supports all top level domain names including but not limited to .com, .net, .org, .to, .uk etc.

2. Ethernet Network Environment

Normally, DDNS service is only necessary for the users that could only obtain dynamic IP addresses. As to the users that could obtain the static valid IP address, they do not usually have to apply the DDNS service. Before we decide if DDNS is necessary for the users, we have to check what kind of Ethernet network environment we have to install our Networked Device on.

(1) Environment of Fixed Valid IP Network

If users could obtain valid IP addresses, they could save the effort to apply DDNS service. Because the IP address in this environment is fixed, users could input the IP address or domain name of demo site directly in the IE browser.

(2) Environment of Dynamic IP Network


If users is under an environment of dynamic IP network (Dial-up xDSL), they have to apply a domain name in advance. Then apply DDNS service. Finally setup the necessary information of DDNS and PPPoE of the Networked Device in order to let the outside administrator be able to access through internet.

3. Application Steps – DDNS & Domain Name

(1). Visit the following web site: <http://www.dyndns.org/>



(2). Click "Account"

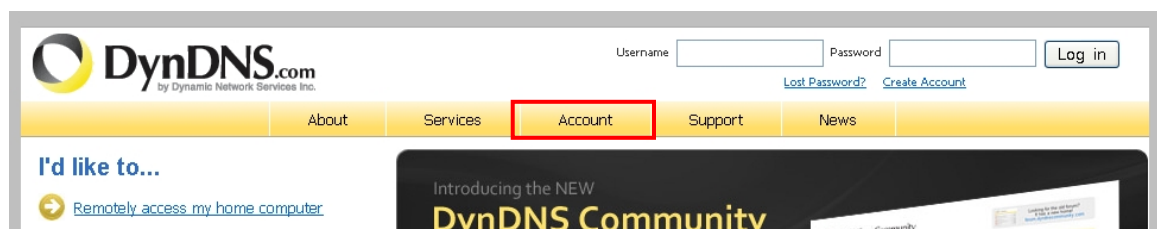

(3). After the columns show up at the left side, click “[Create Account](#)”.


The screenshot shows the DynDNS.com homepage. In the top left, there's a navigation bar with links: About, Services, Account, Support, News. Below this, on the left, is a 'My Account' sidebar with links: Create Account (highlighted with a red box), Login, Lost Password?, and My Cart (0 items). The main content area has a 'My Services' section with a description and links to 'My Zones/Domains', 'Add Zone/Domain Services', 'My Hosts', and 'Add Host Services'. On the right, there's a login prompt: 'Please log in to access private account data.' with fields for Username and Password, a 'Log in' button, and links for 'Forgot your password?' and 'Create new account »'.

(4). Fill the application agreement and necessary information.


- Username
- E-mail address and confirmation
- Password and confirmation
- Submit all the input information and finish creating an account

The screenshot shows the 'Create an account or log in to continue' page on DynDNS.com. The main form is highlighted with a red box. It contains fields for Username, Password, Confirm password, Email, and Confirm email. Below these are subscription options: 'Subscribe to:' with checkboxes for 'DynDNS.com newsletter (1 or 2 per month)', 'Dyn Inc. press releases', and 'Remove HTML formatting from email'. There's a 'Security Image' section with a CAPTCHA image showing the numbers 5, 4, 0, 1, 8 and a text input field to enter them. At the bottom of the form, there's a checkbox labeled 'I agree with the acceptable use policy (AUP) and privacy policy.' (highlighted with a red box and a red arrow pointing to it from the text 'Check the options'). To the right of this checkbox is a 'Create Account' button (also highlighted with a red box). On the right side of the form, there's a section for 'Already Registered?' with fields for Username and Password, a 'Log in' button, and a link for 'Forgot your password?'. The footer of the page includes copyright information (© 1998-2010 Dynamic Network Services Inc.), links to Legal Notices, Privacy Policy, and Contacts, and a TRUSTe CERTIFIED PRIVACY logo.

- (5). Check your e-mail mailbox. There will be an e-mail with a title "Your DynDNS Account Information". Click the hyperlink address to confirm the DDNS service that you just applied. Then DDNS you applied activated.

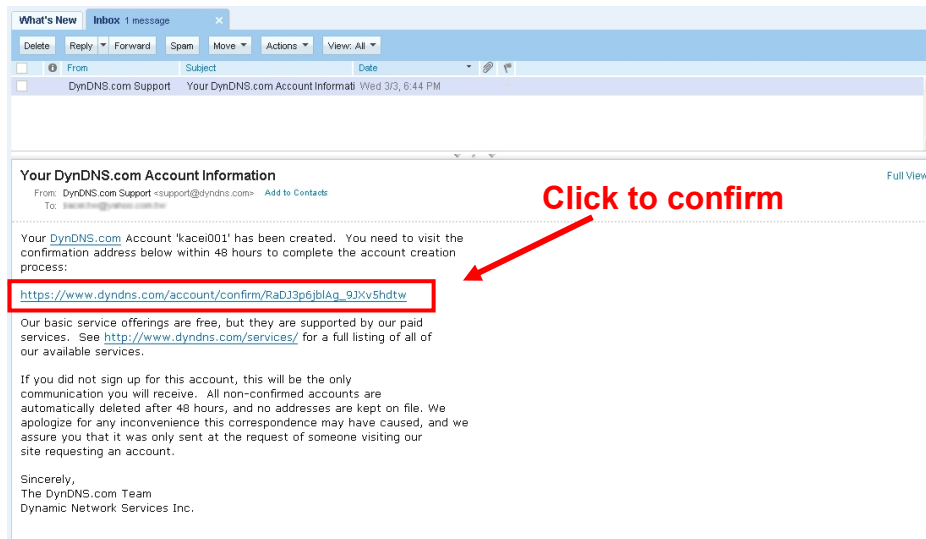


- (6). Enter the web page <http://www.dyndns.org/> again. Input your username and password that you just applied to login administration interface of DDNS server.

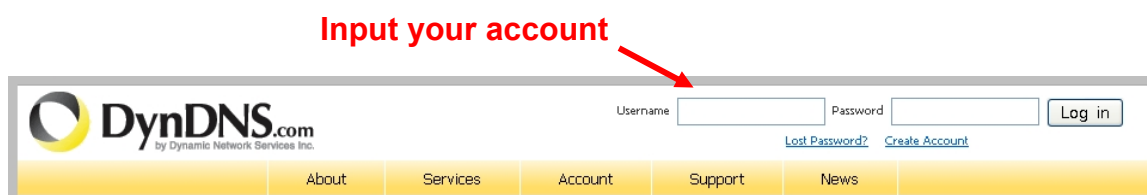


(7). If the correct username and password are input, you can see the following picture at the top-right of the login page.

(8). Click the “My Services”.

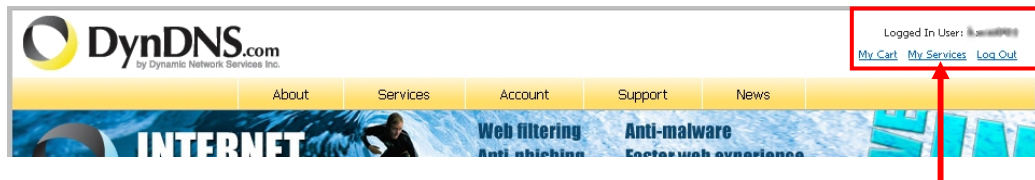

(9). Click the “Add Hostname”.

Click on the link

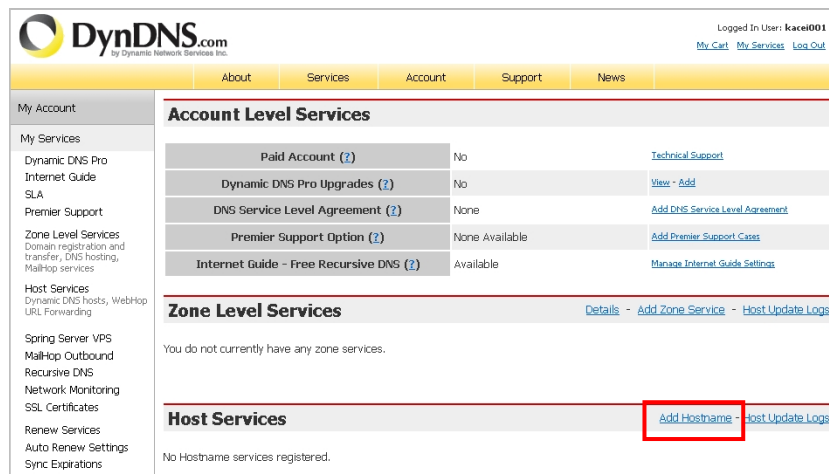

(11). We could create a domain name without any charge at this step. First, we input the host name. (No.1) Then we pick a domain that is easy to remember. Finally (No.2), input you current IP address (No.3) then click on the bottom of “Add To Cart” button to submit the domain name information.

4. Setup the DDNS and PPPoE of network device

At last, users have to enter the web page of Networked Device and setup the necessary information of DDNS and PPPoE after the application of DDNS service. Please check the user manual to access the DDNS and PPPoE pages. After saving the modification, restart the device. The external users could browse the Networked Device by the input of their domain name.

Appendix E:

Troubleshooting & Frequently Asked Questions

If the IP camera is not working properly, before you contact the dealer of purchase for help, please check the troubleshooting list here, this may help you to solve the problem by yourself and therefore saves your valuable time.

Features	
I can not connect to IP camera	<p>A.) Please confirm the IP address setting of the computer you're using. If they're not in the same subnet, they will not be able to communicate with each other.</p> <p>B.) Please make the IP address you used to connect to the IP camera is correct.</p> <p>C.) If you forget the IP address of the IP camera, you will have to reset it to factory default value (which is 192.168.0.20) by pressing 'reset' button at the bottom of the IP camera. You'll need a pen or pin to be able to press the reset button. Press and hold reset button for 5 seconds, then try to connect to the IP camera with IP address '192.168.0.20' again.</p> <p>D.) Please make sure IP camera is correctly powered (the 'Power' LED should be on).</p> <p>E.) If you're trying to connect to the IP camera from Internet, please make sure the port that IP camera uses (HTTP port, see section 3.6.1) is not blocked by firewall or other software / hardware.</p> <p>F.) Contact dealer of purchase for help, if above solutions do not work.</p>
Image refreshes very slow	<p>A.) Try a higher frame rate setting, if it's not 30.</p> <p>B.) Try a lower resolution.</p> <p>C.) If you're connecting this camera from Internet, it could be caused by a slow Internet connection, and it's not a problem caused by camera. However, when the network connection is slow, you</p>

	<p>should use lower frame rate / resolution.</p> <p>D.) Adjust the antenna if you're using wireless connection. The antenna should be perpendicular to the ground to get best reception, and the distance between IP camera and computer / wireless access point should not be too far.</p> <p>E.) Try to adjust 'MTU' setting if you're using PPPoE to connect to Internet. Ask your ISP or network administrator for detailed instruction.</p>
IP camera is not responding	<p>A.) Is the network cable or wireless connection disconnected? Please check it.</p> <p>B.) Unplug the power adapter from wall socket and plug it in again after 10 seconds, then try to connect to the IP camera again.</p> <p>C.) If IP camera is correctly powered ('Power' LED is on), but you still can not connect to the camera when you're sure that IP address is correct, please contact dealer of purchase for help).</p>
Image is fuzzy	<p>A.) Adjust the focus ring on the camera until the image becomes clear.</p> <p>B.) Use a soft cloth to clean the lens on the camera. You can use cloth with water, but DO NOT use alcohol or other chemical solution.</p> <p>C.) Try to adjust brightness setting.</p> <p>D.) If there's any light at the place where IP camera is located, switch it on and see if image looks better.</p>
I set the IP camera to send image by Email or FTP, but nothing is received	<p>A.) If the image is send by Email, please make sure it's not blocked by any anti-spam mechanism.</p> <p>B.) Please make sure you have enough permission for FTP uploading (You can try this by clicking 'Upload a test file' button).</p> <p>C.) Make sure the user name and / or password of SMTP server is correct, if your SMTP server requires authentication (You can try this by click 'Send a test Email' button).</p>

	<p>D.) Please check log, if FTP upload or Email sending is failed, it will be logged, and this may give you some clue on how to solve the problem.</p> <p>E.) Change the threshold to a more sensitive setting.</p>
I heard strange sound when I use pan / tilt function	<p>A.) Please check if anything jams the camera, remove it.</p> <p>B.) If the camera does not respond to you when you're trying to use pan / tilt function, the servo motor inside the camera may dead. Please return the camera to the dealer of purchase and ask for help.</p>
Nothing is heard at the camera side when I use 'Speak to IPCam' function	An external speaker is required to playback the voice received at computer side.

Appendix F: Product Specification

Product	ICA- HM220W
Video Specification	
Image Sensor	1.3Mega-Pixel 1/4" color CMOS sensor
Lens	5 mm, F2.8
Scan Method	Progressive
IR LED	t IR LED x 9 pcs
IR Distance	10M
Sensibility	1 Lux
Signal to Noise	More than 50 dB
Video Encoder	H.264 / MPEG-4 / M-JPEG
Rate Control	CBR(Constant Bit Rate) / VBR(Variable Bit Rate)
Video Resolution	30fps @ 640 x 480, 320 x 240, 160 x 120 15fps @ 1024 x 768 (MPEG-4) 15fps @ 1280 x 1024 (M-JPEG)
Image Control	AGC, AWB, AES
Color	Digital 24bit
View Angle	Horizontal: 65 Degree / Vertical: 51 Degree
P/T Range	Pan: 350 degree Tilt: 120 degree
P/T Speed	5 levels speed adjustable Fastest (1) = 36.393 Degree/sec Slowest (2) = 0.212 Degree/sec
Audio Specification	
Audio Codec	G.726
Audio I/O	Audio in: Internal microphone / Audio out: External Speaker
Network and Configuration	
Network Interface	1 x RJ-45
Network Standard	IEEE 802.3/IEEE 802.3u
Browser / Software	Microsoft ® Internet Explorer 6.0 or later, Cam Viewer Lite/Pro
Network Protocol	TCP/IP, HTTP, SMTP, FTP, NTP, DNS, DDNS, DHCP, UPnP, PPPoE
Motion Detection	3 area definable

Wireless Network	
Wireless Standard	IEEE 802.11b / 802.11g / 802.11n
Frequency	2.4GHz - 2.484GHz
Wireless Encryption	WEP 64/128-bit, WPA-PSK, WPA2-PSK, Cisco CCX Support
Operating Mode	Infrastructure, Ad-Hoc Mode
Antenna Type	2 x 3 dBi (Max) Dual detachable diversity antenna
Antenna Connector	Reversed Polarity SMA Male
Wireless Operating Range	Open Space : 100 ~ 300m Inndoors : 35 ~ 100m
Environment Specifications	
Power Requirement	12V DC, 1A
Dimension (W x D x H)	108 x 112 x108 mm
Weight	300g
Operating Temperature	0 ~ 50 Degree C
Operating Humidity	10 ~ 80% (non-condensing)
Emission	CE, FCC